



## BOOM VANG, MAIN SLIDE PLATES, JIB SHACKLE

A - 2 Plates screw into mast. This allows main sail lugs to be placed into main mast slide.

B - Boom Vang attaches to middle of boom.

C- Bottom of Boom Vang attaches to base of mast. Note small upward hook. This is for pop top to rest on when it is raised. Thumb screw keeps it in place. Boom Vang has to be eased to allow pop top to rest on hook.

D - Jib halyards are tied to brass shackle that attaches to clew of jib sail. Be aware that sometimes when coming about shackle may clip onto shroud requiring you to go forward and unclip it.