



## ROLLER FURLER, JIB DOWN- HAUL & ANCHOR RODE

**A** - Per Roller Furler instructions. There is a pin that gray 'coil' sits on. Remove this pin to lift coil to obtain access to forestay turnbuckle. Foot of jib is snap shackled to furler. Other side is rope line through slide. This line is attached to top of jib. By pulling this line, you raise jib through slide. This line is tied to top of jib. Stop when jib is about 7-8" from top. You will have to tie another line to this line before raising jib.

**B** - Smaller diameter line is run through shackles, eyes and then through rope cleat on top deck. This line automatically winds in drum when you pull jib halyards and sail winds up and halyards wind around stay when sail comes 'down'.

**C**- Rope rode is in front storage bay. Tie end to chain. Anchor sits on bow pulpit.