

From the centerline of the boat the runners are 20° to the edge of the runner on the aft end and 18° to the edge of the runner on the forward end.



16" From aft end
of runner to aft
flange


108" From fwd. end of runner to bow





Picture of ballast tank top

This is where the ballast vent plug is located under the steps

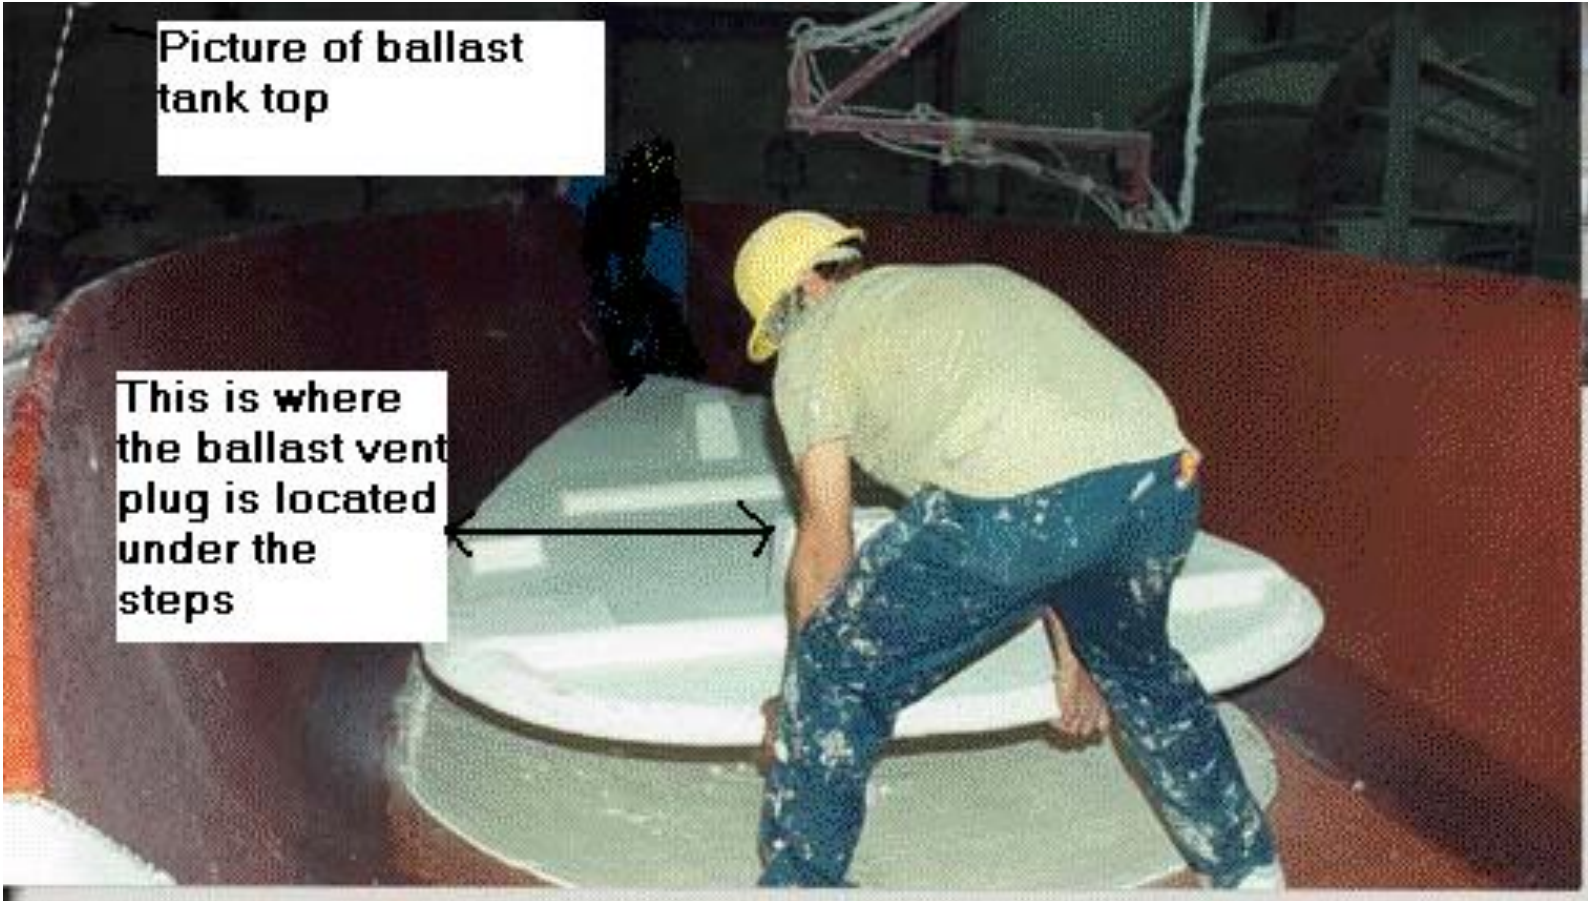







HUNTER 260



































