



Thank You! From the Marlow-HunterTeam

Dear Marlow-Hunter Owner,

Congratulations and welcome to the Marlow family! As a Marlow-Hunter owner, you will enjoy the quality and the attention to detail for which Marlow boats are renowned. The Marlow organization and your dealer are committed to your service and total satisfaction.

This Operator's Manual will acquaint you with the proper operation and maintenance of your new Marlow-Hunter, whether in port or at sea, with a heavy emphasis on boating safety, our primary concern.

The new boat Warranty Registration Form you signed at the time of delivery will be sent to us by your dealer. This registration begins the two year warranty and establishes your contact information in our system.

As you already know, we work with the highest quality equipment manufacturers to supply various components installed on your boat. To receive full warranty coverage on all the individual components, such as engines, electronics and appliances, be sure to also complete their registration process. Most, if not all, manufacturers provide online registration. As an alternative, complete and return the respective manufacturer's warranty cards included in your digital or hard copy owner's manual packet. Please remember all the information contained in the OEM (Original Equipment Manufacturer) manuals supersedes the information contained in this manual.

Finally, if you are new to boating, be certain to learn the proper rules of seamanship to ensure the safety of your passengers. We recommend reading books such as <u>Chapman's Piloting</u>, <u>Seamanship</u> and <u>Small-Boat Seamanship Manual</u> for useful information concerning this aspect of boating. Attend a safe boating course offered by the United States Coast Guard Auxiliary, United States Power Squadron, or any enterprise experienced in conducting safe boating courses.

Thank you for choosing Marlow-Hunter. We are confident your new boat will provide you and your family with years of enjoyable boating.

The Marlow-Hunter Team, Marlow-Hunter, LLC

Welcome to the Marlow-Hunter Family

A Proud Heritage / A Strong Future

Marlow-Hunter carries on from one of America's oldest privately held boating companies. In August 2012, Hunter Marine Corporation became Marlow-Hunter, LLC and is continuing the great tradition started almost 40 years ago. David Marlow, owner and founder of Marlow Yachts, has stepped into executive leadership for the Hunter line of sailboats and the reintroduction of the Mainship line of cruisers. As a result, Marlow-Hunter benefits both from decades of his personal experience, common sense, drive for excellence, understanding of the customer and love for all things boating as well as decades of craftsmanship, innovation and dedication of an existing production team. We are excited about the future and the opportunity to continue the heritage of Hunter and to produce each new boat better than the last.

Your New Hunter

Your new Hunter 37 stands alone in its class. Nothing compares to its elegance, comfort, convenience and ease of handling. Conceptually, we have taken the required and desired from the past and melded it with tomorrow and sprinkled the whole with style. Specifically, our design, engineering, manufacturing and service teams are united in pride to provide you the rich pleasure of Hunter ownership. Every feature, every piece of equipment and its placement has been engineered to provide you the best advantage on the water. Your Hunter 37 is a gem.

How to Use this Manual

We suggest initially reading your operator's manual from beginning to end when you first receive your new boat. By doing this, you will gain a quick overall perspective of your boat's features and controls as well as a basis for locating more detailed and specific information. This manual weaves together words, drawings and pictures to convey the clearest understanding of the components of your new Marlow-Hunter.

Table of Contents & Glossary

For quick reference, a table of contents is located in the beginning of this manual and references specific page numbers for the concepts, instructions and reference material. Also, a glossary is located in the final portion of this manual to clarify any unfamiliar terms.

Safety Warnings and Symbols

Your safety is our highest priority. Please carefully read the Boating Safety chapter in this manual. In it, you will find an explanation of the caution, warning, and danger symbols used throughout the manual. These symbols highlight situations that are potentially harmful and provide helpful information for safe boating.

For questions regarding your Hunter or this manual, contact Customer Service at:

Marlow-Hunter, LLC Route 441, Post Office Box 1030 Alachua, FL, USA 32616 Phone: (386) 462-3077 Fax: (386) 462-4077 e-mail: aftersales@marlow-hunter.com

(8am to 5pm EST) 1-800-771-5556

Operator's Manual Chapters

- 1. Introduction
- 2. Documents and Forms
 - 3. Warranty
 - 4. Boating Safety
 - 5. Fuel System
 - 6. Underwater Gear
 - 7. DC Electric Systems
 - 8. AC Electric Systems
 - 9. Water Systems
- 10. Sanitation and Waste Systems
 - 11. Engines and Transmissions
 - 12. Sails & Rigging
 - 13. Getting Underway
 - 14. Maintenance
 - 15. Glossary

Pg. 4.4
Pg. 4.11
Pg. 5.3
Pg. 7.3
Pg. 8.2
Pg. 8.2
Pg. 8.5
Pg. 8.5



FAQ Quick Reference Guide

How do I operate my air conditioner?

How do I fill my fresh water tank? Pg. 9.1

How do I sanitize my water? Pg. 9.2

How do my bilge pumps work? Pg. 10.2

How do I rig my boat?

How do I install my mainsail?

How do I reef my sails?

How do I start my engines?

How do I fix scratches?

What periodic maintenance should I pg. 14.8 perform?

How do I lift and store my boat?

Pg. 12.6

Pg. 12.6

Pg. 12.6

Pg. 12.8

Pg. 14.9



TABLE OF CONTENTS

Section	Description	Page
1.	Introduction	
1.1	The Manual Packet	1.1
1.2	Owner/Operator Responsibilities	1.1
1.3	Dealer's Responsibilities	1.2
1.4	Additional Sources of Information	1.2
1.5	Original Equipment Manufacturers' (OEM) Manuals	1.3
1.6	Warranties	1.3
1.7	Hull Identification Number (HIN)	1.3
1.8	Manufacturer's Certifications	1.3
1.9	Service Parts and Repair	1.4

2.	Documents and Forms	
2.1	Pre-Delivery Service Record	2.1
2.2	Vessel Information Form	2.1
2.3	Preliminary Care and Maintenance Checklist	2.1
2.4	Float Plan	2.1
2.5	USCG Recreational Boating Accident Report	2.2
2.6	Vessel Inventory Forms	2.2
2.7	Miscellaneous Forms	2.2
	Pre-Delivery Service Record Document	2.3
	Vessel Information Document	2.4
	Preliminary Care and Maintenance Checklist Document	2.5
	Float Plan Document	2.11
	USCG Recreational Boating Accident Report Document	2.12
	Vessel Inventory Documents	2.18
	Miscellaneous Forms Documents	2.22

3.	Limited Warranty	
	Phase One of the Limited Two-Year	3.4
	Warranty	

Section	Description	Page
	Phase Two of the Limited Two-Year Warranty	3.4
	Limited Five-Year Hull Structure and Bottom Blister Warranty	3.5
	Restrictions Applicable to Warranties	3.6
	Warranty Registration	3.7
	Transfer of Limited Warranties	3.7
	Owner Information Card Document	3.8
	Warranty Registration Form	3.9
	Acknowledgement of Transfer of Ownership Sample Document	3.10
	Graphical Explanation of Warranty Coverage	3.11

4.	Boating Safety	
4.1	Hazard Alerts	4.1
4.2	General Safety Issues	4.1
4.3	Carbon Monoxide Hazard	4.3
4.4	Other Potential Hazards	4.9
4.5	Fire	4.11
4.6	Distress Signals	4.12
	Lightning Storm Warning	4.15
	Specifications	4.16
	Standard Features	4.17
	Exterior Description Illustration	4.18
	Interior Arrangement Illustration	4.19
	Deck Hardware Layout Illustration	4.20
	Deck Hardware List	4.21
	Available Standard Options	4.22

5.	Fuel Systems	
5.1	Fuel Tank	5.1
5.2	Fuel Supply Lines and Hoses	5.2
5.3	Fuel Valves	5.2
5.4	Fuel Filters	5.3
5.5	Fueling Your Boat	5.3

TABLE OF CONTENTS

Section	Description	Page
5.6	LPG System	5.4
	Troubleshooting	5.8
	Fuel Safety Checklist for Boarding	5.9
	Fuel System Layout	5.10
	LPG System Layout	5.11

6.	Underwater Gear	
6.1	Mechanical Propulsion Components	6.1
6.2	Steering Components	6.3
6.3	Intakes and Discharges	6.5
6.4	Monitoring Equipment	6.6
6.5	Anchoring and Windlass	6.6
6.6	Keel	6.7
	Troubleshooting	6.8
	Intakes/Discharges Below Waterline Illustration	6.9
	Thru-Hulls Above Waterline - Star- board Side Illustration	6.10
	Thru-Hulls Above Waterline - Port Side Illustration	6.10

7.	DC Electric Systems	
7.1	DC Power System and Component Overview	7.1
7.2	DC Power Supply and Control Components	7.2
7.3	DC System Components and Operation	7.7
7.4	Other DC System Components	7.13
7.5	General Maintenance	7.14
	Troubleshooting	7.15
	DC System Major Component General Layout Illustration	7.16
	Interior/Exterior Lighting Layout Illus- tration	7.17
	DC Outlet Layout Illustration	7.18

Description Bad	ı
-----------------	---

8.	AC Electric Systems	
	'	0.4
8.1	AC Power System Overview	8.1
8.2	AC Power Supply Equipment and Components	8.1
8.3	AC System Components and Operation	8.8
	Troubleshooting	8.11
	AC System Major Component General Layout Illustration	8.12
	AC Outlet Layout Illustration	8.13
	Optional Air Conditioning Ducting Layout Illustration	8.14

9.	Water Systems	
9.1	9.1 Fresh Water Tanks and Fills	
9.2	Pumps	9.2
9.3	Pick-ups, Valves and Strainers	
9.4	Water Heater	9.5
	Troubleshooting	9.7
	Fresh Water System Layout Illustration	9.8
	Option Air Conditioning Plumbing Layout Illustration	9.9
	Optional Generator Plumbing Layout Illustration	9.10
	Manual Toilet Raw Water Layout & Heat Exchanger Layout Illustration	9.11

10.	Waste System	
10.1	Drains and Discharges	10.1
10.2	Pumps	10.2
10.3	Engine and Generator Waste	10.4
10.4	Head System	10.5
10.5	Holding Tank	10.6
10.6	Blower	10.7

TABLE OF CONTENTS

Section	Description	Page
	Troubleshooting	10.8
	Bilge/Sump Pump & Drain System Layout Illustration	10.9
	Air Conditioning Waste Water Layout Illustration	10.10
	Engine & Optional Generator Exhaust System Layout	10.11
	Black Water Plumbing Layout Illustration	10.12
	Engine Compartment Blower Layout Illustration	10.12

11.	Engines and Transmissions	
11.1	Engine and Transmission	11.1
11.2	Engine Fluids	11.5
11.3	Engine Operations	11.5
11.4	Engine Exhaust	11.7
11.5	Maintenance	11.7
	Troubleshooting	11.8

12.	Sails and Rigging	
12.1	Mast	12.1
12.2	Standing Rigging	12.2
12.3	Boom	12.2
12.4	Mainsail	12.2
12.5	Headsails	12.2
12.6	Running Rigging	12.3
12,7	Rigging the Boat	12.6
12.8	Sail Reefing & Stowing	12.9
12.9	Supporting Hardware	12.12
	General Rig Components	12.14
	Mainsail / Jib Specifications Illustration	12.15

Section	Description	Page
	Standing Rigging Specifications Illustration & Table	12.16
	Standing Rigging Layout Illustration	12.17
	Running Rigging Specifications Table	12.18
	Running Rigging Lines From Mast Step - Standard Rig Illustration	12.19
	Running Rigging Lines From Mast Step - Furling Rig Illustration	12.19
	Mainsheet & Boom Outhaul Layout Illustration	12.20
	Traveler Lines Layout (With Mainsheet) Illustration	12.21
	Vang Layout (Conventional & Solid) Illustration	12.22
	Furling Jib Layout Illustration	12.23
	Optional Spinnaker Layout Illustration	12.24
	Generalized Reefing Layout Illustration	12.25
	Lazy Jack Layout Illustration	12.26
	Stack-Pack Sail Cover Installation Illustration	12.27

13.	Getting Underway	
13.1	Before Boarding	13.1
13.2	Boarding Your Boat	13.1
13.3	Starting the Engines	13.2
13.4	Getting Underway	13.3
13.5	Returning to Port	13.5
13.6	Emergency Operations	13.5

14.	Maintenance	
14.1	Tools / Parts / Materials	14.1
14.2	Exterior	14.1
14.3	Interior	14.5

Operator's Manual

14.4	Mechanical Systems and Components	14.7
14.5	Periodic Maintenance	14.8
14.6	Storage and Lifting Fitting Out After Storage	
14.7		
	Routine Maintenance	14.13
	Sling Locations Illustration	14.15

	15.	Glossary	15.1
- 1		,	

 $Downloaded \ from \ \underline{www.Manualslib.com} \ \ manuals \ search \ engine$



Chapter 1

Introduction

MH37-





This Page Intentionally Left Blank

To convey a basic introduction to your boat, this chapter is organized into the following sections:

- 1. The Manual Packet
- 2. Owner/Operator Responsibilities
- 3. Dealer's Responsibilities
- 4. Additional Sources of Information
- 5. Original Equipment Manufacturers' (OEM) Manuals
- Hull Identification Number
- 7. Manufacturer's Certifications
- 8. Service, Parts and Repair

1.1 The Manual Packet

This Operator's Manual, along with the OEM (Original Equipment Manufacturers) manuals, is provided to assist you in operating your boat and using its various systems and equipment safely. It provides:

- · Basic safety information
- · Descriptions of many of your boat's features
- Explanations of the equipment on your boat
- · The fundamentals on the use of that equipment
- · The fundamentals on the use of your boat.

This Operator's Manual provides various drawings and technical documentation to assist in locating your boat's devices and equipment. However, please note that while every effort is made to maintain consistency between these technical references and production, efforts to improve the vessel designs may date some of the information found herein.

The information found in this Operator's Manual may only summarize more detailed information found elsewhere in the OEM manuals. These summaries are intended to be a convenient reference for daily use. OEM manuals take precedence over the information found in this Operator's Manual.

This manual is not intended to provide a course in boating safety, navigation, anchoring or docking your boat. Generally speaking, operating a boat requires more skill, knowledge and awareness than what is necessary to operate a car or truck. Consequently, responsible boat operators should pursue all avenues necessary to become knowledgeable and experienced in all facets of boat ownership and operational safety.

1.2 Owner/Operator Responsibilities

Whether in digital or hard copy format, please keep this manual in a dry, secure and readily accessible location on your boat at all times! Transfer it to the new owner if you decide to sell the boat.

Whether this is your first boat or an unfamiliar model, please insure that you obtain handling and operating experience before assuming command. For your safety and the safety of your passengers, you must:

- · Take a course in Boating Safety;
- Get instruction or aid in the safe and proper handling of your boat;
- Familiarize yourself and your passengers of the locations and use of all safety and essential operating equipment.
- Understand and follow the rules of the waterways.
- Learn how to navigate a boat in all sea and weather conditions;
- Register your boat. Contact state boating authorities or your dealer for registration requirements.

Boating Safety courses provide owners and operators with the opportunity to gain knowledge and experience in a variety of skills:

- Navigation
- · Seamanship and boat handling
- · Rules of the Waterway
- Knowledge of federal, state, and local regulations
- · Weather prediction
- · Safety at sea
- · Survival in bad weather
- Respect for others on the water
- · First aid
- · Radio communication
- · Distress signals
- · Rendering assistance to others
- Use of lifesaving equipment
- · Pollution control
- · Knowledge of the boat and its systems
- Seaworthiness
- Leaving or approaching a dock mooring
- · Anchoring and weighing anchor
- Beaching/shallow water operations

- Towing/being towed
- · Handling mooring lines and tying up
- Procedures for emergencies including fire, flooding, collision, medical emergencies, etc.

Be aware, even though your boat is categorized properly, the sea and wind conditions corresponding to the design categories A, B, or C (as set by the Recreational Craft Directive) (see Fig. 1.1) can range from strong gale to severe conditions where only a competent, fit and trained crew handling a well maintained boat can safely operate.

DESIGN CATEGORIES

Sea and wind conditions for which a boat is assessed by the International Standard to be suitable, provided the craft is correctly handled in the sense of good seamanship and operated at a speed appropriate to the prevailing sea state.

Design Category A ("ocean")

Category of boats considered suitable to operate in seas with significant wave heights above 4 m and wind speeds in excess of Beaufort Force 8, but excluding abnormal conditions, e.g. hurricanes.

Design Category B ("coastal")

Category of boats considered suitable to operate in seas with significant wave heights up to 4 m and winds of Beaufort Force 8 or less

Design Category C ("inshore")

Category of boats considered suitable to operate in seas with significant wave heights up to 2 m and a typical steady wind force of Beaufort Force 6 or less.

Design Category D ("sheltered waters")

Category of boats considered suitable to operate in waters with significant wave heights up to and including 0,30 m with occasional waves of 0,5 m height, for example from passing vessels, and a typical steady wind force of Beaufort 4 or less.

REF: EN ISO 12217

Finally, we welcome your comments or suggestions concerning this manual. Did you find the information helpful? Was the information delivered in a clear and precise manner? Was the information thorough enough to help you with your new boat? Please contact Customer Service at aftersales@marlow-hunter.com if you have any questions or comments.

1.3 Dealer's Responsibilities

In addition to conducting a pre-delivery check and service of your boat, your dealer should provide:

- A description and demonstration of the safety systems, features, instruments, and controls of your boat;
- 2. An orientation in the general operation and mechanical systems of your boat;
- 3. A copy of the Product Delivery Service Record form completed by you and the dealer during your inspection of the boat:
- 4. A review of all warranty information and how to obtain warranty service;
- 5. A complete set of owner's manuals (digital or hard copy).

If you do not receive these materials, forms, or information, or you have any questions, contact your dealer or Marlow-Hunter at www.marlow-hunter.com.

1.4 Additional Sources of Information

In North America, contact one of the following for information on boating courses:

- · U.S. Coast Guard Auxiliary
- U.S. Power Squadron
- · Canadian Power and Sail Squadrons
- Red Cross
- · State Boating Offices
- · Yacht Clubs

Figure 1.1

Boat U.S. Foundation

Outside of North America, contact your dealer, or your government boating agency for assistance.

Marlow-Hunter is pleased to supply you with; and strongly recommends that you read the following:

Piloting and Seamanship (Chapman) Motor Yacht and Sailing P.O. Box 2319, FDR Station New York, NY 10002

Additionally, Marlow-Hunter recommends that you purchase and read the following:

Yachtsman Handbook by Tom Bottomly Motor Yacht and Sailing P.O. Box 2319, FDR Station New York, NY 10002

The Complete Book of Boat Maintenance and Repair by Dave Kendall Doubleday and Co. Garden City, NY 11530

Pleasure Yachting and Seamanship U.S. Coast Guard Auxiliary 306 Wilson Road Oaklands Newark, DE 19711

1.5 Original Equipment Manufacturers' (OEM) Manuals

Marlow-Hunters feature various pieces of equipment and components from other manufacturers installed on your boat. Examples include engines, pumps, generators, etc. Most OEMs provide operation and maintenance manuals for your boat's equipment. Keep OEM manuals together with your Marlow-Hunter Operator's Manual in a safe and accessible place. Be sure to transfer them to the new owner if you sell your boat.

NOTE: If information in this Operator's Manual differs from that found in the OEM manuals, the OEM manuals take precedence.

1.6 Warranties

For U.S. and non-EU compliant countries, your Marlow-Hunter warranty info can be found in the Limited Warranty chapter in this manual.

For international owner's, your Marlow-Hunter warranty can be found in your CE compliant Owner's Manual.

Nearly all OEM equipment has its own limited warranty. Warranty information and registration procedures for these components are found on the manufacturer's websites or OEM manuals digitally included with Marlow-Hunter's digital Operator's Manual. Locate and read these individual warranties and organize them for easy, future reference.

1.7 Hull Identification Number (HIN)

The "Hull Identification Number", located on the starboard aft side of your boat, is the most important identifying factor of your boat and must be included in all correspondence, orders and warranty claims. Failure to include this information creates delays.

Hull Number Format: US-MHLYYXXXDXZZ

"US" - country origin, "MHL" - Manufacturer, "YY" - model number, "XXX" - hull number, "D" - manufacture start month code, "X" - manufacture year code, "ZZ" - model vear

Also of importance are the engine part numbers and serial numbers. When corresponding or ordering parts, please include these numbers in your communications. Refer to the engine OEM manuals for serial number locations and record them for future reference.

1.8 Manufacturer's Certifications

As a boat manufacturer, Marlow-Hunter builds our products to the guidelines established under the Federal Boat Safety Act of 1971. This act was promulgated by the U.S. Coast Guard having the authority to enforce such guidelines on boat manufacturers selling products in the United States. Marlow-Hunter ensures that all of it's products comply with these guidelines.

The National Marine Manufacturers Association (NMMA) provides Marlow-Hunter with a third party certification. The NMMA is an organization that represents the marine

industry and assists manufacturers, boat dealers, marinas, repair yards and component suppliers in areas of legislation, environmental concerns, marine business growth, and state and federal government agency interaction. The third party certification that Marlow-Hunter participates in, uses well known Standards and Recommended Practices of the ABYC, American Boat and Yacht Council.

We at Marlow-Hunter participate extensively in the ABYC, which is all non-profit, and develops and publishes voluntary standards and recommended practices for boat on equipment design, construction, service and repair. We utilize all applicable ABYC standards in the construction of Marlow-Hunter boats.

Finally Marlow-Hunter sells their products worldwide, and, as such, must conform to the various rules and regulations required by other countries. Most notably are the European ISO (International Organization for Standardization) standards which require the application of the CE (Common European) mark. This mark, much like the NMMA certification here in the U.S., gives you, the boat owner, specific information concerning your boat.

1.9 Service, Parts and Repair

When your boat needs service, parts, or repair, contact your dealer or Marlow-Hunter at www.marlow-hunter.com to find a service/parts location. To locate repair and parts facilities for the OEM equipment installed on your boat, refer to the respective OEM manual for that component.

Introduction

Notes:
. <u> </u>

Introduction

Notes:	
	1.6



Chapter 2

Documents and Forms

MH37_



Documents and Forms
This Page Intentionally Left Blank
i

This chapter introduces and includes the following documents and forms that will be important in the ownership and operation of your vessel:

- 1. Pre-Delivery Service Record
- 2. Vessel Information Form
- 3. Preliminary Care and Maintenance Checklist
- 4. Float Plan
- 5. USCG Recreational Boating Accident Report
- 6. Vessel Inventory Forms
- 7. Miscellaneous Forms

Many of these forms contain lists of items and recommendations that we believe should be incorporated into your own ongoing list of preventative maintenance items and safety check points. THIS LIST SHOULD NOT BE CONSIDERED A COMPLETE SERVICE MANUAL OR THE ONLY ITEMS ON YOUR BOAT IN NEED OF ROUTINE MAINTENANCE, INSPECTION OR ATTENTION.

You will find that we address commonly found optional equipment items installed on Marlow-Hunter boats, as well as most standard equipment from Marlow-Hunter. Owner's need to familiarize themselves with individual equipment manuals on all such items, especially aftermarket purchases or optional equipment installed by your dealer or Marlow-Hunter. This should insure that you are following the manufacturer's recommendations for proper maintenance and up-keep.

Again, to reemphasize, we strongly recommend that all owners complete a Power Squadron course followed with a complementary boat inspection before leaving the dock. To locate a Power Squadron in your area please visit www.usps.org.

In addition, reviewing and familiarizing yourself with the Chapman's Piloting Manual is also highly recommended for every boat owner. This manual contains demonstrations for safety drills which should be practiced routinely, dealing with adverse conditions, general boat handling and recommended safety equipment. Our opinion is that no boat owner should operate a boat without first reviewing this manual and without having ready access to it while boating.

2.1 Pre-Delivery Service Record

Your Marlow-Hunter dealer will complete a Pre-Delivery Service Record form (Fig. 2.1) before you take delivery

of your boat. It is the dealer's responsibility to both you and Marlow-Hunter to give your boat a final inspection prior to delivery. The purpose of this inspection is to assure proper adjustment and operation of the entire vessel. Your dealer should provide you and Marlow-Hunter a copy of the Pre-Delivery Inspection Report at the time of delivery. Store this document in a safe place. Do not keep it aboard your boat.

If this form is not fully completed, Marlow-Hunter will not pay warranty costs (see the Warranty chapter in this operator's manual for further information) for items that should have been covered in the pre-delivery service inspection and recorded on the Pre-Delivery Inspection Report.

2.2 Vessel Information Form

This form (Fig. 2.2) is convenient for helping to identify specific information regarding your boat. We recommend you place a copy on the boat and another ashore allowing quick reference.

2.3 Preliminary Care and Maintenance Checklist

Use these checklists (Fig. 2.3) to help you cover the various facets of operating your boat. These checklists will help you standardize and familiarize your review of the boat's equipment and components and provide the basis for an enjoyable and safe boating experience.

2.4 Float Plan

This form (Fig. 2.4) is useful by providing a record of your destination, departure and return times, boat description, passenger list, and other information about the trip you have planned. At the bottom of the form is space for listing emergency phone numbers in case your return is delayed past the expected time. It also has space for indicating information about the person filling the report. Leave the completed form ashore with a responsible person. We recommend you make several copies of this form each boating season to make sure you have a good supply.

2.5 USCG Recreational Boating Accident Report

No one likes to think about having a boating accident, but boating accidents do happen. You must file an accident report (Fig. 2.5) after a boating accident just as you must file an accident report after an automobile accident.

You must file this report with the U.S. Coast Guard within 10 days if boat or property damage totals \$2,000 or more and within 48 hours if an accident results in one of the following:

- 1. Death
- 2. A person disappears
- Personal injury requiring medical treatment beyond first aid

State statutes determine whether you must file an accident report in this case. An accident report must be filed if the damage exceeds a threshold dollar value as established by the states; the threshold is generally \$100-\$200. Refer to Boating Safety Resource Center at www. uscgboating.org to verify the threshold for a particular state.

NOTE: State and local agencies may also have accident reporting requirements. Check with local enforcement agencies or with your dealer regarding local requirements.

2.6 Vessel Inventory Forms

These forms (Fig. 2.6) are itemized to help organize and document your gear and equipment. Forms exist for emergency equipment, spare parts, light bulbs and general listing.

2.7 Miscellaneous Forms

Finally, inserted at the end of this section are several documents (Fig. 2.7) you may find helpful. These sample forms are designed to help your organization in dealing with your new boat. Please familiarize yourself with these forms; they can be very useful.

MARLOW-HUNTER, LLC

PRE-DELIVERY SERVICE RECORD

Prop Size Prop Rotation Prop installed J Shaft turns fres Shaft alignmen Engine intake t Pet-cocks clos Rudder swings (check with wh Emergency tilk Emergency tilk Cockpit seat ha Companionway Check keel bol Hook up and ti Check hose cla drain, galley dr pump – A/C – c Electrical equip () Steaming lig () Steaming lig () Steaming lig Check bilge bu VHF radio oper Mast wire tube Check optional T IN WATEI Check for leaks and keel bolts Check vindow. The check window. Check window. Check window. Check opening Check rub rail	shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check system, complete operational check ches lift smoothly sliding hatch and door works smoothly for tightness mps on engine pickup, engine exhaust, vanity in, fresh water system, tollet hoses and bilge ment operational: ts () Cabin lights () Anchor light th () Stern light () Courtesy lights nping system – operational titional properly sealed dripless packing spring tension & set screws	DEALER	SIZE OWNER	46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 88. 59. 60. 61. RIG 62. 63. 64. 65. 66.	ENG # ER STARTING ENGIN Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks diding speed OK, Max RPM OC Gear shifts work properly – Instruments register properl Check stuffing box drip rate Purge optional dripless pacl Hour meter reading properly Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I	E: for leaks OK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: level and overflow bottl / gth ength ength	al le if supplied	01
ORE LAUNG Prop Size_Prop Rotation_Prop Installed John Shaft turns fres Shaft alignmen Engine intake t Pet-cocks clos Rudder swings (check with whe Emergency tills with owner Primary steerin Cockpit seat ha Companionwa) Check keel bol Hook up and the Companionwa Check keel bol Hook up and the Check hose cladrain, galley () Running lig () Steaming lig () Steaming lig () Steaming lig () Steaming lig but the Check optional TIN WATEI Check for leaks and keel bolts Check of thrudrain, toilet pic refrigerator Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	H PROCEDURE: Shaft Size roperty with cotter pin in shaft y shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check ches lift smoothly is for tightness high and shack and door works smoothly s for tightness in then battery cables inps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge inset ment operational: ts () Cabin lights () Anchor light th () Stern light () Courtesy lights inping system – operational titional properly sealed dripless packing spring tension & set screws it:	DEALER		AFT 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 61. RIG 62. 63. 64. 65. 66. 67. 68.	CER STARTING ENGIN Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idling speed OK, Max RPM Gear shifts work properly – Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly CONAL GENERATOR Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper	E: for leaks DK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	al le if supplied	01
ORE LAUNG Prop Size_Prop Rotation_Prop Installed John Shaft turns fres Shaft alignmen Engine intake t Pet-cocks clos Rudder swings (check with whe Emergency tills with owner Primary steerin Cockpit seat ha Companionwa) Check keel bol Hook up and the Companionwa Check keel bol Hook up and the Check hose cladrain, galley () Running lig () Steaming lig () Steaming lig () Steaming lig () Steaming lig but the Check optional TIN WATEI Check for leaks and keel bolts Check of thrudrain, toilet pic refrigerator Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	H PROCEDURE: Shaft Size roperty with cotter pin in shaft y shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check ches lift smoothly is for tightness high and shack and door works smoothly s for tightness in then battery cables inps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge inset ment operational: ts () Cabin lights () Anchor light th () Stern light () Courtesy lights inping system – operational titional properly sealed dripless packing spring tension & set screws it:	DEALER		AFT 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 61. RIG 62. 63. 64. 65. 66. 67. 68.	CER STARTING ENGIN Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idling speed OK, Max RPM Gear shifts work properly – Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly CONAL GENERATOR Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper	E: for leaks DK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	al le if supplied	01
ORE LAUNC Prop Size Prop Rotation Prop installed J Frop	H PROCEDURE:			46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 88. 59. 60. 61. RIG 62. 63. 64. 65. 66.	CER STARTING ENGIN Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idling speed OK, Max RPM Gear shifts work properly – Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly CONAL GENERATOR Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper	E: for leaks OK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: level and overflow bottl / gth ength ength	al le if supplied	01
Prop Size Prop Rotation Prop installed J Shaft turns fres Shaft aligned in Check with wh Eregency till with owner Primary steerin Cockpit seat ha Companionwa Check keel boi Hook up and ti Check hose cla drain, galley dr pump – A/C – g Electrical equir () Running lig () Steaming lig () Steaming lig Electrical equir Check bilge pu VHF radio oper Mast wire tube Check or thru- Mast wire tube Check or thru- drain, toilet pic- refrigerator Check window: Check opening Check vub rail: 110 dockside c Toilet operates Pressure water	Shaft Size roperty with cotter pin in shaft y shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check ches lift smoothly sliding hatch and door works smoothly s for tightness mps on engine pickup, engine exhaust, vanity in, fresh water system, tollet hoses and bilge ment operational: ts () Cabin lights () Anchor light th () Stern light () Courtesy lights mping system – operational titional properly sealed dripless packing spring tension & set screws tutlet rudder post, shaft log, stuffing box, strut bot null fitting leaks: engine pickup, galley sink		OWNER	46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 88. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idding speed OK, Max RPM C Gear shifts work properly— Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly FIONAL GENERATOR I Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper	for leaks OK forward, reverse, neutrally (3-4/minute) king assembly ENGINE: nark level and overflow bottl gth ength	le if supplied	
Prop Rotation, Prop installed Shaft turns free Shaft aligned in Engine intake to Pet-cocks closs (check with wh Emergency till with owner Primary steerin Cockpit seat ha Companionway Check keel bol Hook up and tic Check hose clading, galley dry pump – A/C – Q Electrical equal (1) Running lig (1) Steaming lig (1) Steaming lig (2) Steaming lig (3) Steaming lig (3) Steaming lig (3) Steaming lig (4) Check bige pu VHF radio oper Mast wire tube Check optional VT IN WATEI Check for thruing the Check window. Check optional Check window. Check optional Check window. Check optional Check window. Check optional	roperty with cotter pin in shaft y shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) r steering system, complete operational check gly system, complete operational check ches lift smoothly sliding hatch and door works smoothly sfor tightness mps on engine pickup, engine exhaust, vanity in, fresh water system, tollet hoses and bilge sinst () Cabin lights () Anchor light tt () Stern light () Courtesy lights mpning system – operational tional roperly sealed dripless packing spring tension & set screws tell trudder post, shaft log, stuffing box, strut bol stull fitting leaks: engine pickup, galley sink			46. 47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 88. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Oil pressure OK Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idding speed OK, Max RPM C Gear shifts work properly— Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly FIONAL GENERATOR I Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper	for leaks OK forward, reverse, neutrally (3-4/minute) king assembly ENGINE: nark level and overflow bottl gth ength	le if supplied	
Prop installed Shaft turns free Shaft turns free Shaft alignmen In Shaft alignmen In Shaft alignmen Ingnie Intake t Pet-cocks clos Rudder swings (check with wh Emergency till, with owner Primary steerir Cockpit seat his Companionway Check Keel boi Hook up and ti Check hose cladrain, galley dr pump – A/C – Electrical equip () Steaming lig () Steaming lig () Steaming lig () Steaming lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for thruit and keel bolts Check window. TIN WATEI Check window. The Check opening Check opening Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	y shaft log tube in relation to strut rur hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check glystem, complete operational check ches lift smoothly sliding hatch and door works smoothly for tightness then battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: Is () Cabin lights () Anchor light () Stern light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws and the country of the count			47. 48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 67. RIG 62. 63. 64. 65. 66.	Water flow out of exhaust Check fuel line connections No engine water or oil leaks Idling speed OK, Max RPM Cear shifts work properly - Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly CIONAL GENERATOR CARACTER CARAC	DK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	le if supplied	
Shaft turns frei Shaft alignein intake ti Shaft alignein intake ti Shaft alignein intake ti Pet-cocks clos Rudder swings (check with wh Emergency tills with owner Primary steerir Cockpit seat he Companionway Check keel bol Hook up and ti Check hose cladrain, galley dr pump – A/C – equipment of the cladrain, galley dr pump – A/C – equipment of the companion way to be companion way to	y shaft log tube in relation to strut rur hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check glystem, complete operational check ches lift smoothly sliding hatch and door works smoothly for tightness then battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: Is () Cabin lights () Anchor light () Stern light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws and the country of the count			48. 49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 61. RIG 62. 63. 64. 65. 66.	Check fuel line connections No engine water or oil leaks Idling speed OK, Max RPM C Gear shifts work properly – Instruments register properl Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly FIONAL GENERATOR I Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Main fits and operates proper Main fits and operates properly	DK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	le if supplied	
Shaft aligned in Shaft aligned in Shaft aligned in Shaft alignmen Engine intake t Pet-cocks clos Rudder swings (check with whe Emergency tilk emergency tilk with owner Primary steerin Cockpit seat ha Companionway Check keel boil Hook up and tight of the Check hose claim galley drain, to the companion open Mast wire tube Check of the Check window. TIN WATEI Check for the Check window. Check opening Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	shaft log tube in relation to strut ru hull clear and installed properly d on engine freely – no binding or hard spots el) steering system, complete operational check glystem, complete operational check ches lift smoothly sliding hatch and door works smoothly sfor tightness mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge snest ment operational: ts () Cabin lights () Anchor light tt () Stern light () Courtesy lights mping system – operational titional properly sealed dripless packing spring tension & set screws the rudder post, shaft log, stuffing box, strut bot stull fitting leaks: engine pickup, galley sink			49. 50. 51. 52. 53. 54. 55. OPT 56. 57. 58. 60. 61. RIG 62. 63. 64. 65. 66.	No engine water or oil leaks Idling speed OK, Max RPM C Gear shifts work properly - Instruments register proper! Check stuffing box drip rate Purge optional dripless pacl Hour meter reading properly CIONAL GENERATOR C Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates proper proper Main fits and operates properly	DK forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	le if supplied	
Engine intake t Pet-cocks clos Rudder swings (check with wh Emergency tills with owner Primary steerin Cockpit seat ha Companionway Check keel bol Hook up and ti Check hose cla drain, galley dr pump – A/C – 9 Electrical equility () Running lig () Steaming lig () Steaming lig () Steaming lig () Steaming lig Check blige pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for Italian Check for thruch and keel bolts Check window. Check opening Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	rur hull clear and installed properly d on engine freely – no binding or hard spots el) rsteering system, complete operational check g system, complete operational check ches lift smoothly sliding hatch and door works smoothly s for tightness her battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light ht () Stern light () Courtesy lights enging system – operational tional properly sealed dripless packing spring tension & set screws the rudder post, shaft log, stuffing box, strut bot and liftting leaks: engine pickup, galley sink until fitting leaks: engine pickup, galley sink			51. 52. 53. 54. 55. OPT 56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Gear shifts work properly – instruments register properl Check stuffing box drip rate Purge optional dripless pack Hour meter reading properly CIONAL GENERATOR Crank case oil level at full mengine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right In Jib fits properly Main fits and operates proper properly Main fits and operates properly Main fits and operates properly secured Shrouds and stays right len Main and jib halyards right In Main fits and operates properly Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly secured Shrouds and stays right len Main fits and operates properly secured Shrouds and Shroud	forward, reverse, neutrally (3-4/minute) king assembly / ENGINE: hark level and overflow bottl / gth ength ength	le if supplied	
Pef-cocks clos Rudder swings (check with wh Emergency till Emergency till Cockpit seat his Cockpit seat his Companionway Check keel bol Hook up and ti Check hose cle drain, galley pump – A/C – g Electrical equip () Running lig () Steaming lig () Steaming lig Check bilge UHF radio oper Mast wire tube Check optional T IN WATEI Check for leaks and keel bolts Check window: Check window: Check window: Check window: Check vibr ali 110 dockside c Toilet operates Pressure water Pressure Pressure Water Pressure	d on engine freely – no binding or hard spots el) steering system, complete operational check ches lift smoothly sidding hatch and door works smoothly sfor tightness mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light th () Stern light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws the control of the con			52. 53. 54. 55. OPT 56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66. 67.	Instruments register propert Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly FIONAL GENERATOR Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates prop	ly (3-4/minute) (iking assembly / ENGINE: nark level and overflow bottl / gth ength	le if supplied	
Rudder swings (check with wh Emergency tills with owner Primary steerir Cockpit seat had Companionway Check keel bol Hook up and tild Check hose cladrain, galley dr pump – A/C – gellectrical equig () Running lig Check bilge pu VHF radio oper () Steaming lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for leaks and keel bolts Check for thrudrain, toilet pic refrigerator Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	freely – no binding or hard spots el) steering system, complete operational check g system, complete operational check ches lift smoothly sliding hatch and door works smoothly s for tightness then battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light () Stern light () Courtesy lights nping system – operational tional oroperly sealed dripless packing spring tension & set screws :- rudder post, shaft log, stuffing box, strut bol null fitting leaks: engine pickup, galley sink			53. 54. 55. OPT 56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Check stuffing box drip rate Purge optional dripless paci Hour meter reading properly FIONAL GENERATOR I Crank case oil level at full mengine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates properly secured Main fits and operates properly Main fits and operates properly men and perates properly	(3-4/minute) king assembly ENGINE: nark level and overflow bottl gth ength		
Emergency tille with owner Primary steerin Cockpit seat ha Companiomy Check keel boil Hook up and tip Check hose cle drain, galley dr pump – A/C – g Electrical equip () Running lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for thrudain, toilet pic refrigerator Check window. Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	steering system, complete operational check g system, complete operational check ches lift smoothly sliding hatch and door works smoothly s for tightness his battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light ht () Stern light () Courtesy lights nping system – operational tional oroperly sealed dripless packing spring tension & set screws :: rudder post, shaft log, stuffing box, strut bol null fitting leaks: engine pickup, galley sink			55. OPT 56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Hour meter reading properly FIONAL GENERATOR Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates prop	ENGINE: level and overflow bottl gth ength		
with owner Primary steerin Cockpit seat ha Companionway Check keel bol Hook up and ti Check hose cla drain, galley dr pump – A/C – Q Electrical equil () Running lig () Steaming lig () Steaming lig () Steaming lig () Check blige pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for thruch the companion of the compa	g system, complete operational check ches lift smoothly sliding hatch and door works smoothly sfor tightness here battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset nent operational: ts () Cabin lights () Anchor light ht () Stern light () Courtesy lights niping system – operational tional roperly sealed dripless packing spring tension & set screws described to the set of the			OPT 56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66. 67. 68.	Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right li Jib fits properly Main fits and operates prope	ENGINE: nark level and overflow bottl		
Cockpit seat he Companionway Check keel bol Hook up and tic Check hose cled drain, galley dr pump – A/C – cg Electrical equip () Running lig Check bilge pu VHF radio oper Mast wire tube Check optional T. IN WATE! Check for leaks and keel bolts Check for thrudrain, toilet pic refrigerator Check window. Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	ches lift smoothly sliding hatch and door works smoothly for tightness hten battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge ment operational: ts () Cabin lights () Anchor light t) () Stern light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws : rudder post, shaft log, stuffing box, strut bol null fitting leaks: engine pickup, galley sink			56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates prop	level and overflow bottl		
Companionway Check keel bol Hook up and ti Check hose cle drain, galley dr pump – A/C – g Electrical equig () Running lig () Steaming lig () Steaming lig Check bilge pu VHF radio oper Mast wire tube Check optional T IN WATEI Check for thru- drain, toilet pic- refrigerator Check window: Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	sliding hatch and door works smoothly s for tightness then battery cables mps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light ht () Stern light () Courtesy lights enging system – operational tional properly sealed dripless packing spring tension & set screws the court of the court o			56. 57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Crank case oil level at full m Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates prop	level and overflow bottl		
Check keel bol Hook up and tis Check hose cladrain, galley dr pump – A/C – g Electrical equir () Running lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for leaks and keel bolts Check for thrudrain, tollet pic refrigerator Check window. Check opening Check rub rall : 110 dockside c Toilet operates Pressure water minutes to see	s for tightness hiten battery cables in some some some some some some some some			57. 58. 59. 60. 61. RIG 62. 63. 64. 65. 66. 67.	Engine water pickup open Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I bib fits properly Main fits and operates prop	level and overflow bottl / gth ength		
Check hose cladrain, galley drain, toilet pic refrigerator Check window. T IN WATEI Check for Indian, toilet pic refrigerator Check window. Check opening Check rub rail. 110 dockside c Toilet operates Pressure water minutes to see	nps on engine pickup, engine exhaust, vanity in, fresh water system, toilet hoses and bilge enset ment operational: ts () Cabin lights () Anchor light tt () Stern light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws the court of the cour			58. 59. 60. 61. RIG 62. 63. 64. 65. 66.	Check heat exchanger fluid Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I bif fits properly Main fits and operates prop	y gth ength erly		
drain, galley dr pump – A/C – g Electrical equip () Running lig () Steaming lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for leaks and keel bolts Check for thrudrain, toilet pic refrigerator Check window. Check opening Check rub rail : 110 dockside c Toilet operates Pressure water minutes to see	in, fresh water system, toilet hoses and bilge inset ment operational: ts () Cabin lights () Anchor light () Courtesy lights nping system – operational tional properly sealed dripless packing spring tension & set screws rudder post, shaft log, stuffing box, strut bol null fitting leaks: engine pickup, galley sink			59. 60. 61. RIG 62. 63. 64. 65. 66. 67.	Bleed air out of line Check flow out exhaust Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right l Jib fits properly Main fits and operates prope	y gth ength erly		
pump – A/C – q Electrical equity () Running lig () Steaming lig () Steaming lig Check bilge pu VHF radio oper Mast wire tube Check optional TIN WATEI Check for thru- drain, toilet pic- refrigerator Check opening Check rub rali 110 dockside c Toilet operates Pressure water minutes to see	enset ment operational: ts () Cabin lights () Anchor light tt () Stern light () Courtesy lights nping system – operational tional roperly sealed dripless packing spring tension & set screws defined: the country of th			61. RIG 62. 63. 64. 65. 66. 67.	Hour meter reading properly GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right l Jib fits properly Main fits and operates prope	gth ength erly		
() Running lig () Steaming lig () Steaming lig Check blige pu VHF radio oper Mast wire tube Check optional T IN WATE! Check for thru- drain, toilet pic refrigerator Check window. Check opening Check rub rail : 110 dockside c Toilet operates Pressure water minutes to see	ts () Čabin lights () Anchor light th () Stern light () Courtesy lights nping system – operational tional oroperly sealed dripless packing spring tension & set screws : : : : rudder post, shaft log, stuffing box, strut bol null fitting leaks: engine pickup, galley sink			RIG 62. 63. 64. 65. 66. 67. 68.	GING: Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right I Jib fits properly Main fits and operates prope	gth ength erly		
() Steaming lig pu VHF radio oper Mast wire tube Check optional T IN WATEI T IN WATEI Check for leaks and keel bolts Check for thrudarin, toilet pic refrigerator Check window: Check opening Check rub rali 110 dockside c Toilet operates Pressure water minutes to see	ht () Stern light () Courtesy lights nipping system – operational tional roperly sealed dripless packing spring tension & set screws :: rudder post, shaft log, stuffing box, strut bol stuff litting leaks: engine pickup, galley sink	its		62. 63. 64. 65. 66. 67.	Mast steaming light OK Spreaders properly secured Shrouds and stays right len Main and jib halyards right le Jib fits properly Main fits and operates prope	gth ength erly		
Check bilge pu VHF radio oper Mast wire tube Check optional T IN WATEI Check for leaks and keel bolts Check for thru- drain, toilet pic refrigerator Check window. Check ubr ali ! 110 dockside c Toilet operates Pressure water minutes to see	nping system – operational titonal roperly sealed dripless packing spring tension & set screws : rudder post, shaft log, stuffing box, strut bol	lts		63. 64. 65. 66. 67. 68.	Spreaders properly secured Shrouds and stays right leng Main and jib halyards right leng Jib fits properly Main fits and operates proper	gth ength erly		
Mast wire tube Check optional T IN WATEI Check for leaks and keel bolts Check for thru- drain, toilet pic refrigerator Check window. Check opening Check rub rail : 110 dockside c Toilet operates Pressure water minutes to see	oroperly sealed dripless packing spring tension & set screws :: rudder post, shaft log, stuffing box, strut bol sull fitting leaks: engine pickup, galley sink	its	=	63. 64. 65. 66. 67. 68.	Spreaders properly secured Shrouds and stays right leng Main and jib halyards right leng Jib fits properly Main fits and operates proper	gth ength erly		
Check optional T IN WATEI Check for leaks and keel bolts Check for thru- drain, tollet pic- refrigerator Check window. Check opening Check rub rail in 110 dockside c Tollet operates Pressure water minutes to see	dripless packing spring tension & set screws rudder post, shaft log, stuffing box, strut bol fitting leaks: engine pickup, galley sink	lts		64. 65. 66. 67. 68.	Shrouds and stays right leng Main and jib halyards right le Jib fits properly Main fits and operates prope	gth ength erly		
Check for leaks and keel bolts Check for thrudrain, toilet pic refrigerator Check window. Check opening Check rub rail 110 dockside c Toilet operates Pressure water minutes to see	t: rudder post, shaft log, stuffing box, strut bol	lts		66. 67. 68.	Jib fits properly Main fits and operates prope	erly		
Check for leaks and keel bolts Check for thrudrain, toilet pic refrigerator Check window: Check opening Check rub rail : 110 dockside c Toilet operates Pressure water minutes to see	rudder post, shaft log, stuffing box, strut bol	its		67. 68.	Main fits and operates prope			_
and keel bolts Check for thru- drain, toilet pic refrigerator Check window: Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	ull fitting leaks: engine pickup, galley sink	lts		68.			norty.	
and keel bolts Check for thru- drain, toilet pic refrigerator Check window: Check opening Check rub rail: 110 dockside c Toilet operates Pressure water minutes to see	ull fitting leaks: engine pickup, galley sink					a system installed prop		
drain, toilet pic refrigerator Check window: Check opening Check rub rail at 110 dockside c Toilet operates Pressure water minutes to see				69.	Install windex			
refrigerator Check window: Check opening Check rub rail 110 dockside c Toilet operates Pressure water minutes to see	up, tollet discharge, knowdepth, A/C,			70.	Main sheet and blocks OK Jib sheet and blocks OK			
Check windows Check opening Check rub rail a 110 dockside c Toilet operates Pressure water minutes to see					Winch handles fit and winch	nes smooth		
Check rub rail a 110 dockside c Toilet operates Pressure water minutes to see	and deck hardware for leaks			73.		pinned		
110 dockside c Toilet operates Pressure water minutes to see	ports and hatches for leaks			74. 75.	Furling system operational Traveler arch ground wire in	octollod		
Toilet operates Pressure water minutes to see	ord and receptacles OK			75.	Traveler archi ground wire in	istalieu		
minutes to see	OK, intake open, outlet open, pumps OK			FINA	AL CHECK:			
	system operates OK (let pressure stand for 15	1		76	All accessory equipment on	hoord		
					All accessory equipment on All loose gear on board	board		
	tem for leaks per manufacturer's instructions			78.	Owner's manual on board			
With fuel tank f line connection	ıll, no leaks at fill pipe, overflow vent or any fu s or gauge	eı		79. 80.			licy	
Drawers work s	moothly			81.				
Doors work sm				82.	Owner advised to complete	component warranty ca	ards	_
Engine aligned Check and tigh	004 or less en all engine mount attachments				All plexiglass hatches and p			
	en all engine flange and coupling bolts				All interior wood free of den Interior cushions, bedding &			- —
				86.	Exterior gelcoat free of defe	cts		
URE START	NG ENGINE:				Fee of water intrusion above			
Throttle contro	cable travel and brackets OK				All electronic equipment cal Exterior wood free of defects			
Clutch control	able travel and brackets OK				Life lines adjusted and secu			_
	evel at full mark I level at full mark							
Engine shut of								
Engine water p	ckup OK							
Bleed air out of Check heat exc	fuel line nanger fluid level and overflow bottle							
Dealer Signatu								
I have receiv	d, read and understand completely the	Marlow-Hu	nter Limited	Warranty for I	my boat.			
Owner Signatu	e:	_		Date:				
ED COMMENTS	(Refer to check list by item #		-					

2.3 Figure 2.1

VESSEL INFORMATION Name Hailing Port I.D. Number Radio Call Signal Telephone Number (Owner's Name Address Builder Model Draft Beam Year Length Height Weight **Hull Color** Trim Color Propeller Size(s) Rotation Vessel Construction Material Engine Model(s) Engine Make(s) Serial Number(s) Number of Cylinders (per) Oil Type Winter Summer Capacity Fuel Tank(s) Capacity Water Tank(s) Capacity LPG Gas Capacity Waste Tank Capacity Hot Water Tank Capacity Generator Make/Model Generator Oil Capacity Transmission Type Transmission Model Transmission Fluid/Oil Capacity Steering Type Steering Model Steering Fluid/Oil Capacity Insurance Company Telephone Number (Address Policy Number Agent

2.4 Figure 2.2

Preliminary care and maintenance checklist

Some items listed below pertain to optional equipment and may or may not be applicable on your boat. A qualified Technician should be used if you are not completely confident in your ability to make repairs or inspections.

Out of Water Inspection

Sacrificial zinc anodes installed (if applicable)	
Propeller installed with keyway, nuts and cotter pin	
Propeller shaft turns freely and without excess wobble (if applicable)	
Strut and shaft log free of corrosion (if applicable)	
Rudder swings easily & correct with wheel direction	
Rudder and nost inspected for cracks and/or concealed damage (may require removing rudder)	
Rudder and post inspected for cracks and/or concealed damage (may require removing rudder) Auxiliary tiller handle properly aligned, fits securely and operational	
All thru-hulls and valves below water line inspected for corrosion, labeled and closed until after launch	
Bottom paint in satisfactory condition	
Hull freshly cleaned and waxed (free of gelcoat damage)	
Mooring, safety lines and fenders onboard and in good condition	
House & engine start batteries installed and filled with correct electrolyte levels	
House & engine start battery boxes secured	
All battery terminals clean and wires secured	
Engine block & transmission drains closed	
Transducer in place	
Hose clamps on all systems below water line tight	
Hose clamps on all systems below water line tight Keel bolts tight and clean Exhaust hose attached and secured Post in free of internal and external water leaks shows water line	
Exhaust hose attached and secured	
Boat is free of internal and external water leaks above water line	
(Failure to stop water intrusion could result in permanent damage or deterioration of structural coring materials and in	ternal
wiring and cause mildew and molding)	
Mast Assembly	
must Assembly	
Review manufacturer's manual for operation and maintenance	
Spreaders securely fastened	
Mast and spreaders free of corrosion and stress cracks	
Standing rigging and pins inspected for wear, tear, corrosion and cracking	
External wiring secured for anchor, steaming and deck lights	
Electronic wind indicator installed per manufacturers recommendation (if applicable)	
Manual wind indicator installed on masthead	
VHF antenna installed and connected	
Headsail furling system installed and inspected per manufacturer's recommendation	
Running rigging inspected for wear and tear	
Mast step stand-up blocks secured and operational	
Mainsail, jib sail and flaking system inspected for wear and tear (non-furling mast).	
In- mast system checked for smooth operation and overall condition of sails	
Specified pre-bend and diagonal tensions attained in mast	
Mast to deck wiring properly sealed with drip loop	

2.5 Figure 2.3

Pre-launch inspection

Anchor System and Ground Tackle Anchor windlass (option) inspected per manufacturer's recommendation Anchor secured in bow roller assembly Spare anchor onboard and accessible (owner purchased) (See Chapman's Manual for recommendations on anchors, anchor lines and drogues) ___ Anchor line pays out and retrieves into anchor line storage without difficulty Bitter end of anchor line secured ____ Anchor rode inspected and free of abrasions ____ Anchor chain shackle is corrosion free and lock-wired at pin after secured to anchor ____ Anchor locker drain is unplugged **Fuel System** Tank fuel level indicator functioning properly Fuel clean and treated with engine manufacturer's recommended additives Primary and secondary (on engine) filters cleaned or replaced Fuel tank supply valves open Fuel tank vent clear from tank to atmosphere (hose has anti-siphoned loop in place at hull or deck side) Steering System Inspect and service steering system according to manufacturer's recommendation Ensure the autopilot drive is not wet or exposed to water ____ Clean and grease autopilot motor swivel joint Ensure compass light is operational **Primary Pumps Functional** Electric bilge pumps and float switches (discharge hose has anti-siphon loop in place to prevent back flow) Fresh water pump Toilet flush pump ____ Shower sump pump __ High water bilge alarm pump Manual bilge pump Illumination and small electrical components check Bow light __ Cabin lights ___ Stern light ____ Deck light ____ Instrument lamps ____ Masthead light ___ Anchor light ____ Cockpit storage courtesy light Chart light ___ Reading lights Distribution panel lights Smoke detectors operational

CO detectors operational Engine compartment blower operational Auto fire suppression system operational (engine compartment) Shore power cord and adapter plug operational. (See manufacturer's manual for complete details.) 110 or 220 VAC outlets operational - ground fault circuits functioning 110 or 220 VAC inverter/battery charging systems functioning properly
Fresh Water Systems
Hot water heater drain shut All spigots and hose bibs shut All tank(s) flushed clean and free of debris and antifreeze Water heater tank and lines flushed of antifreeze All water lines and components purged of air and checked for leaks Sinks and drains checked for leaks and adequate flow Cockpit shower operational Fresh water filters clean Tank water level indicator systems operating- labeling and tank valve selection correspond
Head and Holding Tank Systems
Vent clear from tank to atmosphere Filled with fresh water (electric head) Toilets flush to holding tanks properly Waste level indicating system properly functioning No leaks at any hose fitting within the system
Galley Systems
Stovetop or oven operational (Refer to manufacturer's manual for proper operation and trouble shooting.) Gimbal latch secure and operational Microwave operational Refrigerator operational and proper temperature attained Freezer operational and proper temperature attained lcebox drains properly lcebox drain plugs installed USCG waste disposal-warning poster onboard or in owner's package LPG tank filled, installed and connected to regulator; inspect Gas system for leaks after 3 minutes (Should a leak be detected immediately close the main valve exit boat and seek professional assistance for a thorough inspection.) LPG storage locker drain open and tank storage area free of debris
Topside Inspection
Swim platform operates properly Cockpit cushions cleaned and installed Canvas properly cleaned and installed Rubrail properly secured to hull Load bearing hardware securely fastened; this includes but is not limited to cleats and handrails Lifeline fittings tight and secure Sliding hatch drains free of debris

Ple (CI (CI) Tra Ha	empanionway drop-ins fit properly in companionway and storage rack exiglas hatches and ports adjusted and cleaned. leaners and polishers specifically for Plexiglas can be purchased from most marine supply stores.) aveler arch securely fastened and grounded atches, ports, windscreens and windows adjusted and cleaned ternal teak cleaned and oiled (Teak decking cleaned with mild soap and water.) ternal railings cleaned with soap and water then hand polished using automotive wax deck fill caps sealed properly and have retainer chains intact (except Waste Pump-out) arade vents or sealing caps installed pside surface clean and free of gelcoat damage
Interio	r Inspection
Interpolation In	op-in hatches (bunk and floors) in place and fit securely erior steps and grab rails secured ges clean and free of debris bening port and hatch screens in place ands / privacy curtains, shades and interior cushions cleaned, installed and secured and door opens, shuts and latches properly sure all wires and connection on distribution panels are tight (should be ofessionally inspected) levision / DVD operational ereo / CD operational appman's Manual onboard and readily available fety gear onboard readily available and up to date. ee Chapman's Manual and US Coast Guard website at < www.uscg.mil >for details.) at operator's manual /.OEM manuals onboard
	In Water Inspection
Docks	ide inspection of Engine, pre-start sequence and operating system
All Cra Cra Co Se Air No Th Sh US Sta Co Altr Co Wa	eview engine manual for maintenance requirements and proper starting procedure engine mounting bolts in place and properly torque (per engine manual) ankcase oil at full mark (per engine manual) ansmission fluid / oil at full mark (per engine manual) solant mix ratio proper - heat exchanger and expansion tanks full (per engine manual) awater intake valve open and no leaks bled from fuel lines and system fuel leaks at any fittings rottle linkages smooth and operational autdown system operational autdown system operational acc Oil Discharge warning poster in place haust elbows and hoses tight arting sequence and alarms correct pressure acceptable (per engine manual) solant temperature acceptable (per engine manual) ernator DC output at rated rpm (per engine manual) arter discharged with exhaust our meter operational

Fuel level indicators operational												
 Throttle cable tension set properly												
 Shifter operation correct												
Neutral safety start switch operational												
No inboard exhaust gas leaks												
No fuel / oil / water leaks on engine												
Engine box installed and secured												
Dockside inspection of Generator, pre-start sequence and operating system												
Review and follow manufacturer's manual for operation and maintenance												
 Seawater strainer water-tight and clean												
No leaks in fuel system - Fuel filters clean												
 Lube oil at full mark												
 Coolant level full - proper mix ratio with water (per generator manual)												
 Seawater discharge overboard with exhaust gas												
 No inboard water or exhaust gas leaks												
 Proper voltage output to distribution panel (per generator manual)												
Ship / shore power transfer panel function properly												
Starter battery box secured												
Starter battery cable connections clean and tight												
 Starter battery electrolyte level proper												
Climate Control System												
Review and follow manufacturer's manual for operation and maintenance												
Seawater strainer water tight and clean												
Seawater pump air purged and operational												
Seawater flow adequate fwd and aft												
 Fwd system functions properly in all modes of operation												
Aft system functions properly in all modes of operation												
No seawater leaks in system components and lines												
No condensation leaks to deck or liner												
Air return/intake filters clean and clear												
110 or 220 VAC shore power wired correctly at dock												
Remote control panels operate correctly												
 Condensation drains open												
Pre-departure Checklist												
_ Check bilge for extra water												
 Check weather conditions and tides												
_ Check food supply												
Foul weather gear												
_ Linen, sleeping bags												
_Fuel												
_ Water												
Sunscreen and sunglasses												
Tools												
Docking and anchoring gear												
 Check radio operation												
 Navigation charts and instruments												

Float plan to a friend or Coast Guard Fuel for Stove Cooking and eating utensils Oil level, tight V-belts Check for loose electrical connections in the engine compartment Secure loose tools or equipment in the engine compartment so as to not get fouled in the engine. AC systems off, electrical cord stowed Doors and drawers secure Check steering lock to lock No lines or obstructions near propeller or bow Check mast for rigging irregularities and tightness Halyards and sheets are ready to run Anchor ready to run Lifelines are tight Turn on water lines Stow all loose gear Open engine cooling water thru intake valve
Post Sailing Checklist
Fost Sailing Checklist
When leaving your boat at the dock for more than a short time, it is a good idea to review the following checklist to make sure everything is in order. This will help protect the various components of your boat and add considerably to their attractiveness and usable life.
Flake or furl mainsail and cover or remove and bag. Remove and stow all portable deck hardware such as snatch blocks, winch handles, etc. Secure the boom to the topping lifts and set it firmly amidships with the main sheet purchase. (It is also a good idea to rig a line from the steering wheel or tiller to a convenience cleat to keep the rudder from swinging back and forth with the motion of the water or employ the wheel brake if so equipped.) Attach the shackle ends of all halyards to convenient fittings and take up slack. Find a location leading away from the mast to keep the halyard from slapping the mast. Coil and stow all lines in line lockers Cover the winches and steering pedestal when leaving the boat for several days or more Close all fuel lines and seacocks Switch off the electrical system Pump out the bilge Check air vents, secure ports and hatches, swab the deck, and clean deck stainless, particularly if you have operated in salt water.

Float Plan

Name of Operator		Age										
Address												
Phone												
Boat Make		Model										
Length Hu	l Color	Deck Color										
Registration No	Home Port											
Radio frequencies												
Equipment on Board, PFDs, Flares, Anchor												
Fuel Capacity Water Capacity												
Distinguishing Features												
Departed from												
Date	Time	e										
Destination												
Stops												
Estimated time of Arrival: Date	Time	e										
Name, age, address and phone number	of other persons on bo	pard:										

2.11 Figure 2.4

DEPARTMENT OF HOMELAND SECURITY U.S. Coast Guard

RECREATIONAL BOATING ACCIDENT REPORT

OMB Control Number: 1625-0003 Expires: 9/30/2014

INSTRUCTIONS: Use "Report required because" section below to determine if a report is required for your accident. If required, please have each vessel owner or operator involved in the accident submit a report to their state reporting authority. Each boat operator/owner involved in an accident should submit a separate report. For each question below, please provide answers if applicable and if known; otherwise leave blank. Privacy Act Notice: Authority- 46 U.S.C. 6102 and 33 CFR 173 & 174 authorize the collection of information on boating accidents. Purpose-The Coast Guard uses this information for statistical purposes, chiefly to inform the public, to measure the Program's efforts, and to regulate issues relating to boating safety. Routine Uses-The Coast Guard shares this information within the agency, and if state and federal law permit it, to the public.

		RE	PORT S	UBMISSION	l .					
Approximate value Your or another boat Report submitted by (se	n this accident died: person in this accident st aid: n this accident disapp perty damage (e.g., ped (or likely totaled) so e of damage to your of e of damage to your of in this accident was pelect all that apply): fred if possible)	If so the required If so peared If so fishing \$2,000 boat: other p	ny? s in need of ny? oot yet been ny? ear) caused	To be submitted with 48 hours (if injury, distance) 10 days (if boat/prop) 10 days (if boat/prop) 11 days (if boat/prop) 12 days (if boat/prop) 13 days (if boat/prop) 14 days (if boat/prop) 15 days (if boat/prop) 16 days (if boat/prop) 16 days (if boat/prop) 17 days (if boat/prop) 18 days (if boat/prop) 19 days (if boat	sappearance or death) erty damage only) Local State Reporting ts concerning the accuracy of the stions for reducing the burden to: . Coast Guard, Washington, DC (gement and Budget, Paperwork (s)), Washington, DC 20503. Questions is data should be sent to the Coast					
☐ Boat Owner (if opera☐ Other (describe):	•	,		First Name	Last Name					
				Phone:						
First Name	Last Name		Phone		Primary Cause of Ac	cident				
		AC	SUMMARY	, ,						
WHEN Date: (mm/dd/yyyy) WHERE Body of Water Name	Time:	am 🔲 (seled		DESCRIPTION: Briefly pages if necessary)	describe this accident					
Location (on water) desc	ription			DAMAGE TO YOUR BOAT: Briefly summarize any damage to your boat						
Nearest city/town										
County:	State:			1						
YOUR BOAT - PEOPLE						PERTY: (NOT BOAT)				
# people on board (include				Briefly Suffillia	inze any damage to your	other property (not boat)				
# people being towed (e.	g., on tubes, skis):									
# people wearing lifejack		ed):								
OTHER BOATS INVOLV										
# of other boats involved:	:									

CG-3865 (1/11) Page 1 of 6

	For each question below, please provide answ									ΑP	PLI	CABLE	AND IF K	NOW	N, o	therwis	e lea	ave blank	ζ.		
	Yo									₹ B	OA	λT									
В	BOAT IDENTIFICATION																				
Yo	ur Boat Name:									Manufacturer:											
Mo	odel Name:								Model Year:												
Re	gistration #:									\dagger	Doc	umentat	ion #:								
Ηι	II Identification #					Т		T			D	t - d				٦					
(HIN)										Rer	nted:	∐ Yes			_ No						
SI	SIZE ESTIMATES																				
Le	ngth: ft.			om trans						ft.			in.	Ве	am v	vidth at v	vides	st point:		ft.	
н	JLL MATERIAL		(1001)			,.															
Ту	Type of Hull Material (select one)																				
	Fiberglass				Wood							Rubber	vinyl/canva	as			Other	(describe	 ;):		
	Aluminum			,	Steel							Plastic									
В	BOAT TYPE																				
Boat Type (select one) Available Propulsion (select all that appl													at apply)								
	Cabin motorboat		Inflat	able		Can	oe		- 1				aft (PWC)	1		eller	Air thrust				
	Open motorboat		Hous	eboat		Row	boat		(6	e.g., Ski™	, Wa 1 .Se	ave Runn ea-Doo™	er™, Jet)		Sail		Other (describe):			ribe):	
	Auxiliary sail	H	Sail ((only) Air boat					-		her (describe)				Man	ual					
	Pontoon boat		Kaya		7 2001). (w			\vdash		er jet	\dashv				
EN	NGINE									, ,											
-	# Engines Engine type and horsepower (se)				Fuel	type	e (select	all t	hat apply)			
Ma	anufacturer	İ	Out	tboard		Sterr	ndrive (l.	/O)		Int	ooar	rd l	None	İΤ	Gaso			Diesel		Electric	
	Total horsepower: hp									1			1100			,		000.	Ш		
0														<u> </u>							
C	SAFETY MEASURES Organizations that have conducted a vessel safety check (VSC) on board your boat within the past year (including carriage of safety equipment, e.g., lifejackets, anchor and line, fire extinguishers):																				
- 6						iie ex	_	-15).				Federa	al Agency (Name)						
	US Coast Guard A	Aux	iliary:	VSC E	Jecal?	L	_] Yes	es No				State Agency (Name)						
	US Power Squadre	ons	3:	VSC E	Decal?		Yes No				Other Agency (Na										
# [ife jackets on board	:		# Fire 6	extingu	ishers	s on boa	rd:			Ту	oe of fire	extinguish	ers (e.	g., A	BC):					
				# F	ire ext	inguis	hers use	ed:				Amount	of fire extir	nguish	ers u	ised:					
	ACCIDENT DETAILS – EXTERNAL CONDITIONS																				
W	EATHER				_																
С	verall weather was	(50				It	was (se	lect	one)	'	Visi		s (select o	ne)		nd was					
	Clear Raining					Day			\perp	\dashv	Good				0 mph (,	<i>a:</i> 1			
	Cloudy Snowing Night								+	4	Fair		-			ver 0, up to 12 mph (light)					
Foggy Hazy Other (describe):											Poor		\dashv		Over 12, up to 25 mph (moderate) Over 25, up to 55 mph (strong)						
	Approxim							ate	air te	emp	era	ture:	°F		_			h (stormy)		01197	
W	ATER																	. ,,			
O۱	verall water condition	ons	s (selec	t one):				01	ther	wat	ter o	ondition	ns:								
	Up to 6 in. waves		,										proximate v	vater t	emp	erature:		0	F		
	Over 6 in., up to 2	ft.	waves	(chopp	<i>y)</i>									Stroi	ng cu	ırrent?		Yes		No	
	Over 2 ft., up to 6	ft.	waves	(rough))			На	azaro	dous	s wa	iters? (e.	g., rapid tid	dal flov	v, cu	rrents)		Yes		No	
	Over 6 ft. waves (ver	y rough	1)									Co	ngest	ed w	aters?		Yes		No	
		_															_				

CG-3865 (1/11) Page 2 of 6

For each question belo	ow,	please provide	Э	answers IF APPL	_IC	ABLE AND IF KI	NC	1W	N, otherwise leave blank.			
ACCIDENT	D	ETAILS - AC	С	TIVITIES AND	0	PERATIONS	6	N	YOUR BOAT			
OPERATOR/PASSENGER AC	:TI\	/ITIES										
Operator/passenger activities on	ı yo	our boat at time	C	f accident:								
Activities were (select one)		Operator/Page		ngor activities (se	مماد	et all that anniv)						
Recreational		Fishing	ssenger activities (sel			Tubing		Π	Starting engine			
Commercial		Hunting	_		Water Skiing				Making repairs			
Commercial	\vdash		:ti	vity (e.g., rafting)		Relaxing		T	Other (list):			
		Trinite trater de		, (0.9., 109)		i rolamiy]			
BOAT OPERATIONS												
Your boat operations at time of a	асс	ident (select all t	tr	at apply)								
Cruising (underway under power)		Drifting				Racing			Towing another vessel			
Changing direction		At anchor				Rowing/paddling			Launching			
Changing speed		Being towed				Docking/undocki		g Tied to dock/mooring				
Sailing		Other (list)				J		1	J			
ACCIDEN	TIV	DETAILS -	(CONTRIBUTION	NG	FACTORS O	N	Y	OUR BOAT			
CONTRIBUTING FACTORS												
ndicate factors on <i>your</i> boat wh	ich	may have confi	ri	buted to this acci	dei	nt (select all that a	חמ	v)				
Alcohol use		Improper looko			<u> </u>	Dam/lock	<u> </u>	,, 	Starting in gear			
Drug use		Operator inatter	_			Force of wake/wa	e/wave		Sharp turn			
		Operator inexpe	_									
Excessive speed			_			Hazardous water	15		Restricted vision (e.g., fog)			
Improper anchoring		Language barri	ie	r		Heavy weather			Mission/inadequate aids to navigation (e.g., buoy, daymarker)			
Improper loading		Navigation rule	es	violation		Ignition of fuel or vapor	•		Inadequate on-board navigation lights			
Overloading		Failure to vent				Hull failure			People on gunwale, bow or transo			
Other (describe):												
		ACCIDI	E	NT DETAILS	- }	YOUR BOAT						
MACHINERY/EQUIPMENT FA	JLU	JRE										
ailure of the following machine	ry/e	equipment on yo	0	ur boat contribute	d t	o this accident (s	ele	ct a	ll that apply)			
Engine		Onboard lights	s			Shift			Sound equipment (e.g., horn, whist			
Electrical system		Seats				Radio			Auxiliary equipment			
Fuel system		Steering				Fire extinguisher			Other (list):			
Sail/mast		Throttle				Ventilation						
Onboard navigation aids (e.g.,	GP.	S)										
	Α	CCIDENT DE	E	TAILS - EVE	NT	S ON YOUR	В	AC	Т			
ACCIDENT EVENTS												
Types of events occurring to/on	yo	ur boat during a	ac	cident (select all t	hat	apply)	_					
Collision with recreational boat				Flooding/swamping	ng			Ре	rson fell overboard			
Collision with commercial boat	g., tug, barge)	1	Fire/explosion – fu	ıel			Pe	rson fell on/within boat				
Collision with fixed object (e.g.,	ck. bridge)	†	Fire/explosion – non-fuel			T	Su	dden medical condition				
Collision with submerged object cable)				Carbon monoxide					rson struck by boat			
Collision with floating object (e.g	g., I	log, buoy)		Mishap of skier, tuber, wake					rson struck by propeller or propulsion			
Capsizing			+	boarder, etc. Person left boat vo	olur	ntarily	\dashv	uni Pe	t rson electrocuted			
+ '			+				ار					
Grounding			4		ווע	boat (caused by co	וווכ	ion	or maneuver)			
Sinking			Other (describe)									

CG-3865 (1/11) Page 3 of 6

For each question below, please provide answers IF APPLICABLE AND IF KNOWN, otherwise leave blank.

ACCIDENT DETAILS -YOUR BOATINJURED PEOPLE RECEIVING OR IN NEED OF TREATMENT BEYOND FIRST AID

Report only injured people on, struck by, or being towed by your boat, receiving or in need of treatment beyond first aid. Do not report injured people on, struck by, or being towed by another boat or no boat (e.g., swimmers, people on a dock). If more than one injured person to report, attach additional copies of this page. If none, SKIP INJURED PEOPLE section.

IN.	INJURED PERSON																
First Name MI							Last Name										
Str	eet	•															
Cit	у		Sta	te				Zip									
Ph	one			e of Bi				Age									
IN.	JURY DETAILS		,														
lnj	ury caused when person (select all that a	apply)				Nature of most serious injury (select one)											
	Struck the (e.g., boat, water):						Scrape/bruise		Dislocation								
	Was struck by a (e.g., boat, propeller):						Cut		Internal organ injury								
	Was exposed to carbon monoxide poison	ing					Sprain/strain		Amputation								
	Received an electric shock						Concussion/brain	n injury	Buri	า							
	Other (describe):						Spinal cord injury	y	Other (describe):								
Per	son was wearing lifejacket?		⁄es	1	No		Broken/fractured	bone									
Per	son received treatment beyond first aid	⁄es	1	No	Вс	dy part of <i>most sei</i>											
Person was admitted to a hospital?																	
	ACCIDENT DETA	T -	DEATHS/DIS	SAPPEARAN	CE	S											
Only report deaths/disappearances of people on, struck by, or being to If more than one death/disappearance to report, attach additional copie If none, SKIP DEATHS/DISAPPEARANCES section.																	
PE	RSON WHO DIED/DISAPPEARED																
Fir	st Name		MI	MI Last Name													
Str	eet																
Cit	у		Sta	te				Zip									
Ph	one			e of B			Age										
DE	TAILS OF DEATH/DISAPPEARANC	E															
Inj	ury caused when person (select all that a	apply)				Nature of death/disappearance (select one)											
	Struck the (e.g., boat, water):						Death – by drown	ing									
	Was struck by a (e.g., boat, propeller):						Death – other like	ly cause (describe)								
	Was exposed to carbon monoxide poison	ing															
	Received an electric shock						Disappeared and	not yet recovered									
	Other (describe):						Person was wear	ring lifejacket?		Yes		No					

CG-3865 (1/11) Page 4 of 6

For each ques	tion below, please provide	e answers	IF APPI	LICABLE AND IF	KNOWN, otherwise	leave	blank.		
	ACCIDENT DI	ETAILS	– YOU	IR BOAT OP	ERATOR				
OPERATOR INSTRUCTION			OPERATOR SAFETY MEASURES						
Boating safety instruction completed (select all that apply)			On board, prior to accident, was operator wearing:						
None					A lifejacket?	?	Yes	No	
State course			An engine cut-off switch (Lanyard or wireless device) if equipped?				Yes	No	
USCG Auxiliary course			On board, prior to accident, was operator using:						
US Power Squadrons course			Alcohol? Yes			No			
Internet (name of sponsoring organization)			Drugs?			?	Yes	No	
Other (describe)			Operator arrested for Boating Under the Influence?			?	Yes	No	
			Weather reports consulted prior to accident? Yes				Yes	No	
OPERATOR EXPERIE	NCE		'						
Experience operating thi	s type of boat (select one)								
0 to 10 hours Over 10, up to 100 hours				Over 100, up to 500 hours Over 500 hours					
ACCIDENT DETAILS – OTHER KEY PEOPLE									
If more than two other key NAME/ADDRESS	ple not already documented a people to report, attach addi	itional copie			content of your boat.				
Other boat operator	Other boat owner		other da	maged property	Passenger on you	r boat	□w	itness	
First Name		MI		Last Name	ast Name				
Street		1							
City		State		Zip	Phone				
Other boat name (if any)				Other boat registration # (if any)					
NAME/ADDRESS									
This other key person wa	as a(n) (select all that apply)								
Other boat operator Other boat owner Owner of			other da	other damaged property Passenger on your boat Witness					
First Name		MI		Last Name					
Street									
City		State		Zip	Phone				
Other boat name (if any)			Other boat registration # (if any)						

CG-3865 (1/11) Page 5 of 6

For each question be	low, please pro	ovide answers I	F APPLICABL	E AND IF KNOWN,	, otherwise leave blank.
		YOUR BO	AT OPERAT	ror	
NAME/ADDRESS					
First Name		MI	Last Name		
Street					
City		State	Zip		
AGE/GENDER/PHONE		'	'		
Date of Birth (mm/dd/yyyy)	Age	Gender	Male	Female	Phone
		YOUR B	OAT OWNE	R	
If same as your boat operator	SKIP rest of You	OUR BOAT OV	VNER section.		
NAME/ADDRESS/PHONE					
First Name		MI	Last Name		
Street		-			
City		State	Zip		Phone
	PER	SON SUBMI	TTING THIS	REPORT	
If same as your boat operator	OR owner, SK	IP rest of PERS	SON SUBMITT	ING THIS REPORT	T section.
NAME/ADDRESS/PHONE/RO	OLE				
First Name		MI	Last Name		
Street					
City		State	Zip		Phone
I was a(n) (select one)					·
Other person on board this b	oat				
Accident witness <i>not</i> on boar	rd <i>this</i> boat				
Other (describe):					
S	IGNATURE	OF PERSON	N SUBMITTI	NG THIS REPO	PRT
Your signature					Date (mm/dd/yyyy)
An Agency may not conduct displays a currently valid ON			ot required to re	espond to an inform	nation collection, unless it
The Coast Guard estimates concerning the accuracy of 5422), U.S. Coast Guard, W Project (1625-0003), Washin	this burden esti /ashington, DC	imate or any su 20593-0001 or	ggestions for re	educing the burden	to: Commandant (CG-

CG-3865 (1/11) Page 6 of 6

VESSEL INVENTORY- EMERGENCY EQUIPMENT

Date Purchased	Stowage Life	Description	Location on Board

The U.S. Coast Guard provides free to anyone a pamphlet titled "Federal Requirements for Recreational Boats" For more information go to www.uscg.mil.

2.18 Figure 2.6

VESSEL INVENTORY- SPARE PARTS

Date Purchased	Stowage Life	Description	Location on Board
20101 01011000		2000, p.10.1	
			1
			-
			1
			1
			_
			_
			_
			-
			-
			-
			-
			-
			-
			-
			-
			-
			-

The U.S. Coast Guard provides free to anyone a pamphlet titled "Federal Requirements for Recreational Boats" For more information go to www.uscg.mil.

VESSEL INVENTORY-LIGHTING & REPLACEMENT BULBS

Data Burahasad	Description	Location on Board
Date Purchased	Description	Location on Board

The U.S. Coast Guard provides free to anyone a pamphlet titled "Federal Requirements for Recreational Boats" For more information go to www.uscg.mil.

VESSEL INVENTORY- GENERAL

Date Purchased	Stowage Life	Description	Location on Board
		·	

The U.S. Coast Guard provides free to anyone a pamphlet titled "Federal Requirements for recreational Boats" For more information go to www.uscg.mil.

(Several copies may be required to complete each of the following categories)

Chapman's Piloting recommended operating techniques, maintenance inspections and safety points for my particular boat length and type of sailing

2.22 Figure 2.7

Recommendations made by manufacturers of original equipment for proper maintenance and up-keep

Power Squadron recommendations for maintenance and safe boating

Local sailing club or marina's recommendations for maintenance and up-keep

Dates of practice drills and onboard safety inspections

My personal preferences for maintenance items & safety gear

Notes:	
	-
	_
	_
	_
	_
	_
	-
	-
	_
	_
	_
	_
	_
	-
	-
	_
	_
	_
	_
	_
	_
	-
	_
	_
	_
	_
	_
	_
	-
	_
	_
	_
	_
	_
	_
	_



Chapter 3

Limited Warnanty

MH37.





This Page Intentionally Left Blank

Limited Warranty

Your boat comes with a prorated Two-Year Limited Warranty and a Five-Year Limited Hull Structure and Bottom Blister Warranty. The actual warranty is outlined in the subsequent pages of this chapter and is organized into the following sections:

- 1. General Information
- 2. Phase One of the Limited Two-Year Warranty
- 3. Phase Two of the Limited Two-Year Warranty
- 4. Limited Five-Year Hull Structure and Bottom Blister Warranty
- 5. Restrictions Applicable to Warranties
- 6. Warranty Registration
- 7. Transfer of Limited Warranties
- 8. Owner Information Card
- 9. Pre-Delivery Service Record (PDSR)
- 10. Warranty Registration Form
- 11. Sample Acknowledgment of Ownership Transfer
- 12. Graphical Explanation of Warranty Coverage



YOUR MARLOW-HUNTER LIMITED WARRANTY

Marlow-Hunter, LLC ("Hunter") offers a prorated Limited Warranty on every boat sold and commissioned through an authorized Hunter dealer. A copy of this prorated Limited Warranty is included here, and in your Operator's Manual. If for some reason you are not able to understand the terms of the prorated Limited Warranty, read, or view this document, please contact your localdealer for a replacement copy.

We stand behind the quality of your boat with the above and below mentioned warranty, which you should review. To insure the operation and validity of your prorated limited warranty, please complete the attached card and send it to Marlow-Hunter, LLC within ten (10) days of the purchase date. Section 15 of the U.S. Federal Boat Safety Act requires registration of a boat's first owner. Maintain a copy of the completed owner card for your own reference.

The following prorated warranties apply to all 2015 Model Year boats produced by MARLOW-HUNTER, LLC:

Phase one of the LIMITED TWO-YEAR WARRANTY:

During the first year of ownership or remaining coverage period Hunter warrants to the first-use purchaser and any subsequent owner during this limited warranty period that any part manufactured by Hunter will be free of defects caused by faulty workmanship or materials for a period of twelve (12) months from the date of delivery to the first-use purchaser (see special conditions below) under normal use and service. During this period, as the sole and exclusive remedy, Hunter's obligation under the warranty is limited to the repair or replacement of any such part deemed defective by Hunter. Reimbursement for warranty repairs are to be based on a reasonable number of hours and labor rate established by Hunter.

ALL HUNTER WARRANTS AUTOMATICALLY START NINE MONTHS AFTER THE BOAT LEAVES HUNTER.

Phase two of the LIMITED TWO-YEAR WARRANTY:

During the second year of ownership or remaining coverage period Hunter warrants to the first-use purchaser that any part manufactured by Hunter will be free of defects caused by faulty workmanship or materials. This additional twelve (12) months of coverage ends twenty four (24) months from the date of delivery to the first use purchaser under normal use and service or thirty three (33) months after the boat leaves Hunter. During this period, as the sole and

Limited Warranty

exclusive remedy, Hunter's obligation under the warranty is limited to the repair or replacement of any such part deemed defective by Hunter. Reimbursement for warranty repairs during the second year are to be based on a reasonable number of hours and at fifty percent of the labor rate established by Hunter.

LIMITED FIVE-YEAR HULL STRUCTURE AND BOTTOM BLISTER WARRANTY

Hunter warrants to the first-use purchaser and any subsequent owner during the limited warranty period that the hull of each boat will be free from structural defects in materials and workmanship for a period of five (5) years from the date of delivery to the first-use purchaser (see special conditions below) under normal use and service.

This limited warranty applies only to the structural integrity of the hull and the supporting pan/ grid or stringer system. Hulls, pan/grid or stringers modified in any way or powered with engines other than the type and size installed or specified by Hunter are not covered by this limited warranty. As the sole and exclusive remedy, Hunter's obligation under the warranty is limited to repair or replacement of any such defective part.

ALL HUNTER WARRANTS AUTOMATICALLY START NINE MONTHS AFTER THE BOAT LEAVES HUNTER.

Hunter also warrants to the first-use purchaser and any subsequent owner during the warranty period that the boat will be free from gelcoat blistering on underwater surfaces of the hull, excluding the keel and rudder, for a period of five (5) years from the date of delivery to the first-use purchaser (see special conditions below) under normal use and service. During this period, Hunter will supply or reimburse an authorized Hunter dealer for labor required to repair a blistered underwater surface of the hull. The labor cost reimbursement will be based on the Labor Allowance Schedule established by Hunter from time to time, however if the repair is performed by a non-Hunter dealer, the repair cost must be authorized by Hunter in advance and be based on a reasonable number of hours as determined by Hunter. Hunter will not pay transportation, hauling, launching, bottom paint, storage, dockage, cradling rental, rigging and derigging, or other similar costs. It is recommended that the repair be done during a seasonal haul out for service or storage.

HUNTER EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. NEITHER HUNTER NOR THE SELLING DEALER SHALL HAVE ANY RESPONSIBILITY FOR LOSS OF USE OF A BOAT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, OR CONSEQUENTIAL DAMAGES.

ALL HUNTER WARRANTS AUTOMATICALLY START NINE MONTHS AFTER THE BOAT LEAVES HUNTER.

RESTRICTIONS APPLICABLE TO WARRANTIES

The following circumstances will void the bottom blister limited warranty:

- (1) If the gel-coat has been sanded, sandblasted, or subjected to abrasion or impact.
- (2) If the instructions provided in the Hunter Operator's Manual are not followed according to Hunter's required bottom preparation procedures.

These prorated Limited Warranties do not cover:

- (1.) Paint, sealants, adhesives, window glass, gelcoat, upholstery damage, plastic finishes, engines, engine parts, bilge pumps, stoves, blowers, pressure water pumps, propellers, shafts, rudders, controls, instruments, keels, hoses and equipment not manufactured by HUNTER. Any warranty made and issued by the manufacturer of such items will be, if and where available, provided to the first use purchaser.
- (2.) Problems caused by improper maintenance, storage, cradling, blocking, normal wear and tear, insect control, misuse, neglect, accident, corrosion, electrolysis or improper operation.
- (3) Boats used for hire, training, co-ownership fleets and/or fractional ownership programs and commercial activities including charter.

THESE LIMITED WARRANTIES ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND ARE EXPRESSLY IN LIEU OF ANY AND ALL OTHER REMEDIES AND WARRANTIES EXPRESSED AND IMPLIED. INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHETHER ARISING BY LAW, CUSTOM, CONDUCT, OR USAGE OF TRADE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN THE EVENT THAT IMPLIED WARRANTIES ARE FOUND TO EXIST UNDER THE LAW OF A PARTICULAR STATE, NOTWITHSTANDING THE EXCLUSION CONTAINED HEREIN, THE DURATION OF ANY SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE LIMITED WARRANTY STATED HEREIN. THE PURCHASER ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE TO HIM OR HER WITH RESPECT TO THE QUALITY OR FUNCTION OF THE BOAT. ANY ORAL STATEMENT OR PRINTED MATERIAL ADVERTISING THE BOAT WHICH SPEAKS TO ANY PERFORMANCE CHARACTERISTIC OF THE BOAT OR ANY OF ITS COMPONENTS SHALL BE CONSIDERED AND CONSTRUED AS AN ESTIMATED DESCRIPTION ONLY AND SHOULD NOT BE RELIED UPON AS AN EXPRESS WARRANTY OR AS THE BASIS OF THE BARGAIN FOR THE BOAT OR ANY OF ITS COMPONENTS.

Limited Warranty

ANY CONSEQUENTIAL, INDIRECT OR INCIDENTAL DAMAGES WHICH MAY BE INCURRED ARE EXCLUDED AND PURCHASER'S REMEDY IS LIMITED TO REPAIRS OR REPLACEMENT OF ANY SUCH PART(S). SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL OR INDIRECT DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

WARRANTY REGISTRATION

These limited warranties shall not be effective unless the HUNTER Warranty Registration Form and Pre-Delivery Service Record, which are furnished with each new boat, are filled out completely and returned to HUNTER within ten (10) days of delivery.

Return of the Warranty Registration Form to HUNTER, signed by both Dealer and Owner, is critical. Warranty coverage cannot be initiated until the completed form is received at HUNTER.

All repairs and/or replacements will be made by an authorized Hunter dealer, or at the option of Hunter, at the Hunter plant. If the repairs are of such a nature that the warranty work must be performed at the HUNTER plant, transportation costs to and from the HUNTER plant shall be paid by the owner. The labor cost reimbursement will be based on a Labor Allowance Schedule established by HUNTER and where not applicable, on a reasonable number of hours as determined by HUNTER. Any repairs and replacements must be approved in advance by an authorized HUNTER service representative.

You should also complete the warranty registration for your engine, stove, head, electric water pump and other accessories, if applicable. Warranty information and registration procedures for these components are found within manufacturers' websites or the manufacturers' manuals digitally included with Hunter's digital Operator's Manual.

TRANSFER OF LIMITED WARRANTIES

The limited warranties will be transferred to a subsequent purchaser of the boat if:

- (1) A notice of the transfer of ownership of the boat is given by the subsequent purchaser in writing to Hunter within thirty (30) days of the transfer.
- (2) The notice shall include the name, address, email address and telephone number of the subsequent purchaser, the date of purchase, the hull number and the name of the seller of the boat.

MARLOW-HUNTER, LLC

OWNER INFORMATION CARD

THE HULL IDENTIFICATION NUMBER IS ON THE STARBOARD AFT SIDE OF THE HULL OR TRANSOM. THIS NUMBER MUST BE PROVIDED IN ALL NECESSARY CORRESPONDENCE.

HULL NO.				
DATE DELIVERED TO OWNER				
YACHT NAME				
OWNER NAME				
STREET ADDRESS				
CITY STATE/COUNTRY	ZIP CODE			
HOME PORT				
ENGINE MODEL SERIAL NO	PROP SIZE			
DEALER	PHONE			
STREET ADDRESS				
CITYSTATE/COL	JNTRYZIP CODE			
CUSTOMER SERVICE / WARRANTY				

MARLOW-HUNTER, LLC

PRE-DELIVERY

P.O. BOX 1030 - ALACHUA, FL 32616 SERVICE RECORD **IMPORTANT:** This completed report is required for processing of claims for warranty adjustment. Please forward immediately. **OWNER** NAME NAME **ADDRESS** ADDRESS CITY STATE/ZIP CITY STATE/ZIP HULL# YEAR SIZE ENG# ENGINE MAKE **BEFORE LAUNCH PROCEDURE:** DEALER OWNER AFTER STARTING ENGINE: Prop Size Shaft Size Oil pressure OK Water flow out of exhaust Check fuel line connections for leaks Prop Rotation Prop installed property with cotter pin in shaft Shaft turns freely Shaft aligned in shaft log tube No engine water or oil leaks Idling speed OK, Max RPM OK 49. 50. Shaft alignment in relation to strut
Engine intake thru hull clear and installed properly Gear shifts work properly – forward, reverse, neutral Instruments register properly Pet-cocks closed on engine Rudder swings freely – no binding or hard spots (check with wheel) Check stuffing box drip rate (3-4/minute)
Purge optional dripless packing assembly Emergency tiller steering system, complete operational check with owner Hour meter reading properly Primary steering system, complete operational check Cockpit seat hatches lift smoothly OPTIONAL GENERATOR ENGINE: Companionway sliding hatch and door works smoothly Crank case oil level at full mark Cotheck keel bolts for tightness
Hook up and tightne battery cables
Check hose clamps on engine pickup, engine exhaust, vanity
drain, galley drain, fresh water system, toilet hoses and bilge Engine water pickup open Check heat exchanger fluid level and overflow bottle if supplie 57. Bleed air out of line drain, galley drain, fresh water system, toilet hoses a pump – A/C – genset Electrical equipment operational: () Running lights () Cabin lights () Anchor light () Steaming light () Stern light () Courtesy lights Check bilge pumping system – operational Check flow out exhaust Hour meter reading properly RIGGING: Mast steaming light OK VHF radio operational 19. Mast wire tube properly sealed
Check optional dripless packing spring tension & set screws Spreaders properly secured Shrouds and stays right length Main and jib halyards right length Jib fits properly Main fits and operates properly **BOAT IN WATER:** Topping lift, out haul, reefing system installed properly Install windex
Main sheet and blocks OK 68. Check for leaks: rudder post, shaft log, stuffing box, strut bolts 69. 70. 71. 72. 73. and keel bolts Check for thru-hull fitting leaks: engine pickup, galley sink drain, toilet pickup, toilet discharge, knot/depth, A/C, Jib sheet and blocks OK Winch handles fit and winches smooth Check windows and deck hardware for leaks Rigging properly tuned and pinned Check opening ports and hatches for leaks
Check rub rail and deck joints for leaks Furling system operational Traveler arch ground wire installed 110 dockside cord and receptacles OK
Toilet operates OK, intake open, outlet open, pumps OK FINAL CHECK: Pressure water system operates OK (let pressure stand for 15 minutes to see if pump goes on) Hot water heater operation OK All accessory equipment on board All loose gear on board Check stove system for leaks per manufacturer's instructions With fuel tank full, no leaks at fill pipe, overflow vent or any fuel Owner's manual on board
Warranty registration form completed and signed line connections or gauge Owner familiarized with operation and warranty policy Drawers work smoothly Boat properly cleaned, interior and exterior Doors work smoothly Engine aligned .004 or less Owner advised to complete component warranty cards Owner advised to complete component warrany cards
All plexiglass hatches and ports free of scratches
All interior wood free of dents, dings and scratches
Interior cushions, bedding & curtains clean and free of defects
Exterior gelcoat free of defects 83. 84. 85. 86. 87. Check and tighten all engine mount attachments
Check and tighten all engine flange and coupling bolts **BEFORE STARTING ENGINE:** Fee of water intrusion above and below the water line All electronic equipment calibrated and operational Exterior wood free of defects 88. 89. Throttle control cable travel and brackets OK Clutch control cable travel and brackets OK Life lines adjusted and secure Crank case oil level at full mark Transmission oil level at full mark 42 Engine shut off OK Engine water pickup OK Bleed air out of fuel line Check heat exchanger fluid level and overflow bottle I have received, read and understand completely the Marlow-Hunter Limited Warranty for my boat. Owner Signature: Date: DEALER COMMENTS (Refer to check list by item # Remove 2nd & 3rd Copies and Forward Form Intact. DISTRIBUTION: Original – Marlow-Hunter Service Dept., Canary – Owner, Pink – Dealer FORM #300-16/0112

WARRANTY REGISTRATION



MARLOW-HUNTER, LLC P.O. BOX 1030, HWY, 441 ALACHUA, FL 32615 (386) 462-3077 Fax (386) 462-4077


Year	_ Engine Model & Serial #				
Model	Generator Model & Serial #				
Hull #					
Date Delivered to Dealer	Date Delivered to Custo	mer			
OWNER					
	E-mail Address				
City & State		Zip Code			
Phone: Home	Work	Fax			
Boat Name	Boat Name Location of Boat (Zip-code only)				
DEALER	Dealer (Code			
	Dealer Salesperson				
City & State	•	Zip Code			
	Fax				
FINAL CHECK OUT:					
	□ OWNER FAMILIARIZED WITH HUNTER WARRANTY & OWNERSHIP RESPONSIBILITIES.				
	LERSHIP WARRANTY AND SERVICE P				
	OWNER'S MANAL, ENGINE AND ACCES	SSORY MANUALS.			
□ OWNER RECEIVED & APPROVED PRE-DELIVERY SERVICE RECORD. I understand that it is my responsibility to have read and familiarized myself with the contents of the Marlow-Hunter Owner's Manual, the various engine and component manuals, and the Marlow-Hunter Limited Warranty.					
OWNER'S SIGNATURE		DATE			
BOAT INSPECTION – OWNER FAMIL	LIARIZED WITH THE OPERATION OF	₹:			
□ FUEL SYSTEM	□ ENGINE AND DRIVE SYSTEM	□ STEERING SYSTEM			
□ WATER SYSTEM	□ SAFETY SYSTEMS	■ MAINTENANCE & UPKEEP			
□ AC/DC ELECTRICAL SYSTEM	□ OPERATION OF WASTE SYSTEM	☐ HANDLING & OPERATION			
□ STANDING & RUNNING RIGGING □ STOVE OPERATION □ OWNER SPECIFIED OPTIONS I understand that it is my responsibility to read and familiarize myself with the contents of the Marlow-Hunter Owner's Manual, the various engine and component manuals, and the Marlow-Hunter, LLC Limited Warranty. The Marlow-Hunter, LLC Limited Warranty gives you specific rights. You may also have other rights which vary from state to state. To activate your warranty, please complete this form and return it to MARLOW-HUNTER, LLC. within 10 days of delivery.					
OWNER'S SIGNATURE		DATE			
DEALER'S SIGNATURE		DATE			

WHITE – MARLOW-HUNTER YELLOW-DEALER PINK-OWNER 10/2012


Limited Warranty

	November 6, 2013
Mr. John Smith	
1456 Joy Street	
Sarasota, FL 34266	
Dear Mr. Smith,	
	n notice of transfer of ownership. We are pleased you have I make every effort to assure Hunter ownership will be a
Based on the information you dates of the limited warranties.	have provided, we are pleased to notify you of the expiration
The limited two-year New Bo	oat warranty expires (d)
The limited five-year Hull Stre	ucture and botton. Prister warranty expires (d)
Should you require assistance your Hunter dealer or to call us dire	e at any time auring ownership, we encourage you to contact
Please confirm the information	at the bottom of the page and advise us if any corrections are
`	
Please confirm the information	at the bottom of the page and advise us if any corrections are
Please confirm the information required. Hull No:	at the bottom of the page and advise us if any corrections are Customer Service Manager
Please confirm the information required. Hull No: Telephone: (H)	Customer Service Manager Model:
Please confirm the information required. Hull No: Telephone: (H) Date of Purchase: Purchased From:	Customer Service Manager Model: (C)
Please confirm the information required. Hull No: Telephone: (H) Date of Purchase: Purchased From: Name:	Customer Service Manager Model: (C)
Please confirm the information required. Hull No: Telephone: (H) Date of Purchase: Purchased From: Name:	Customer Service Manager Model: (C)


GRAPHICAL EXPLANATION OF WARRANTY COVERAGE - KEEL BOATS

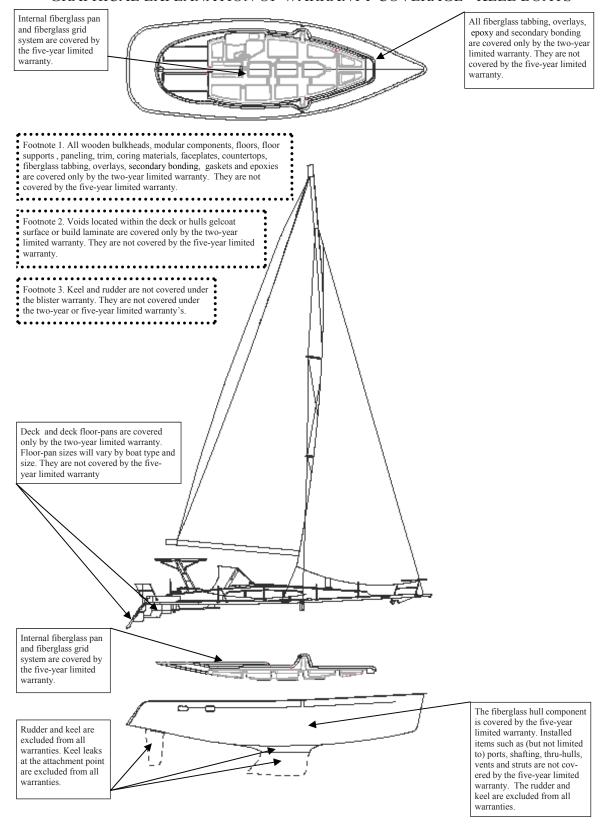

GRAPHICAL EXPLANATION OF WARRANTY COVERAGE - KEEL BOATS

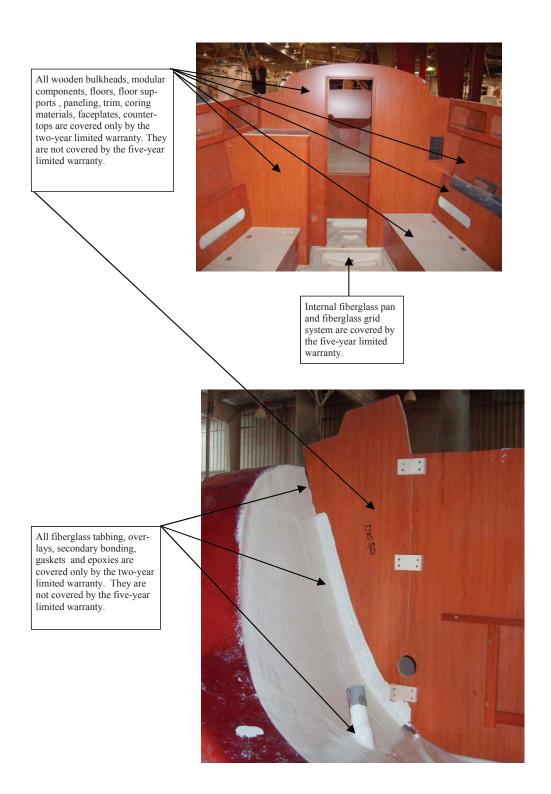


GRAPHICAL EXPLANATION OF WARRANTY COVERAGE—TRAILERABLES

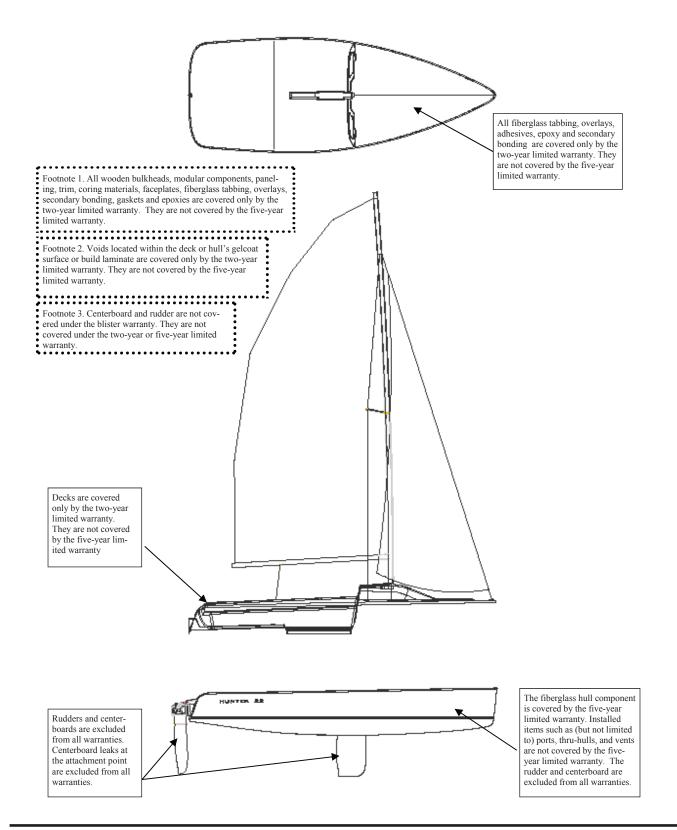

GRAPHICAL EXPLANATION OF WARRANTY COVERAGE—TRAILERABLES

All wooden bulkheads, modular components, supports, paneling, trim, coring materials and faceplates are covered only by the two-year limited warranty. They are not covered by the five-year limited warranty.

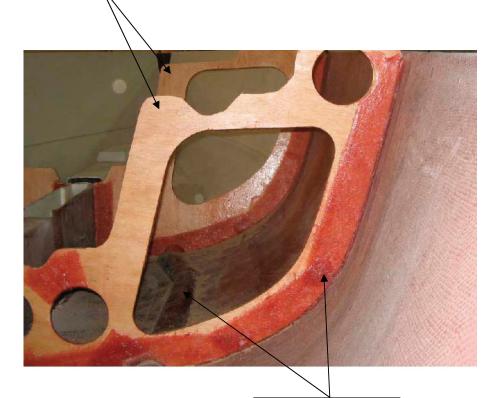

All fiberglass tabbing, overlays, secondary bonding, gaskets and epoxies are covered only by the two-year limited warranty. They are not covered by the five-year limited warranty.

Limited Warranty

Notes:	
	2 16