


ACP REPAIR


How Easy?



Hard hit on dock

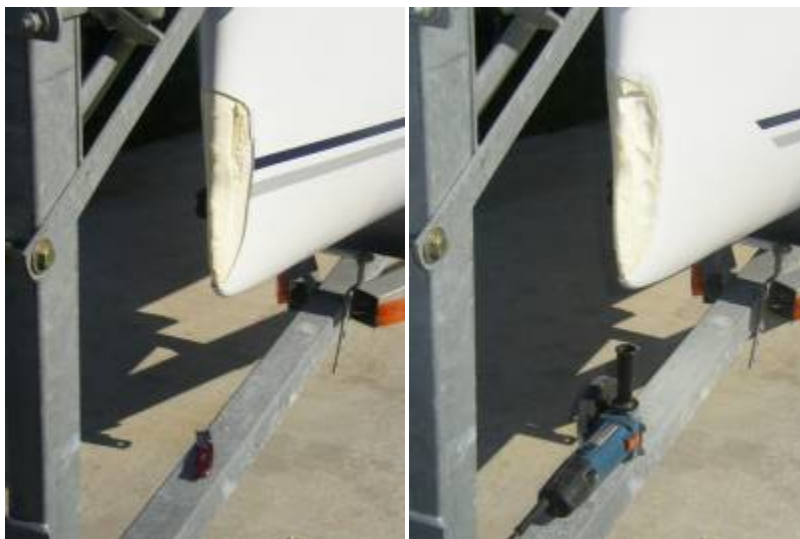

Using a utility knife, cut back to solid. Sand away the loose foam and taper plastic.

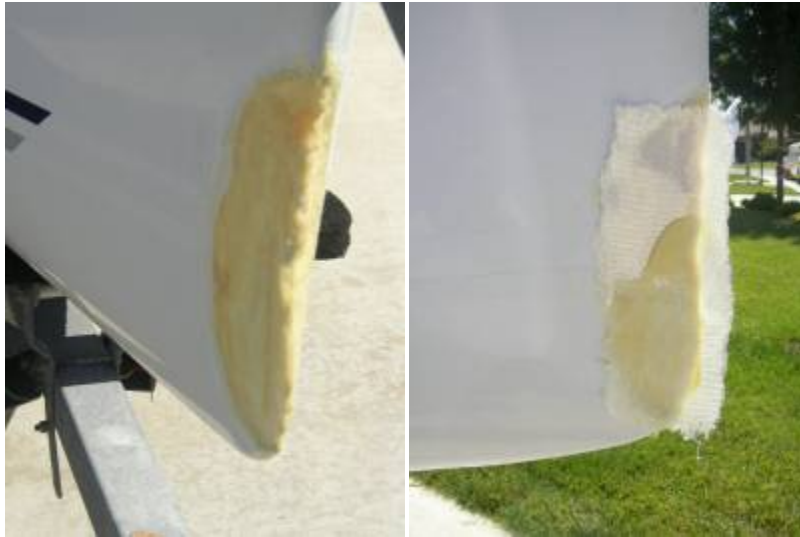

Two part Plexus epoxy is used to firm up the damage and give a smoother repair area.
Unidirectional cloth is layered over repair area, working the epoxy in well.



Continue to work repair to shape



A finish coat of plexus id applied and a light guide coat is used to make sure repair is smooth and sand scratches are removed



Repair is painted and polished the next day. This is the only place I vary from factory recommendations, I use a two part urethane made by BASF, matched at the local automotive paint store. Plexus is sold under the name Devcon Plastic Welder.